


AquFlow Series 2000

Hydraulically Actuated Diaphragm Metering Pump

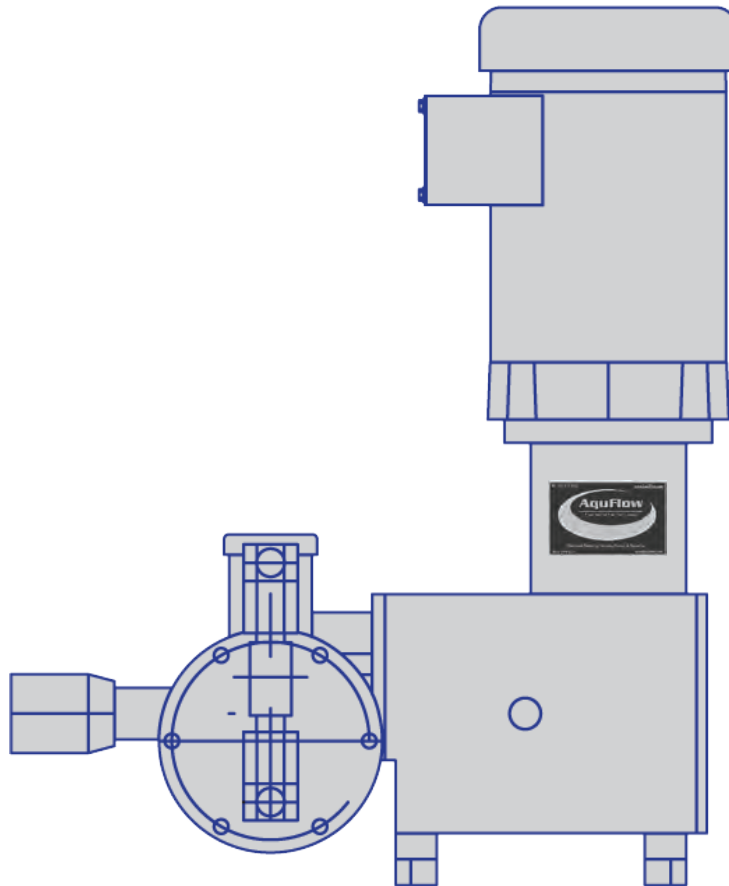

INSTALLATION, OPERATION, & MAINTENANCE MANUAL

AquFlow

CONTENTS

| | Page |
|---|-----------|
| 1. General information | 2 |
| 1.1 Introduction | 2 |
| 1.2 Service documentation | 2 |
| 1.3 Applications | 2 |
| 1.4 Warranty | 2 |
| 2. Safety | 2 |
| 2.1 Identification of safety instructions in this manual | 3 |
| 2.2 Qualification and training of personnel | 3 |
| 2.3 Risks when safety instructions are not observed | 3 |
| 2.4 Safety-conscious working | 3 |
| 2.5 Safety instructions for the operator/user | 3 |
| 2.6 Safety instructions for maintenance, inspection and installation work | 3 |
| 2.7 Unauthorised modification and manufacture of spare parts | 3 |
| 2.8 Improper operating methods | 3 |
| 2.9 Safety of the system in the event of a failure in the dosing system | 4 |
| 3. Technical data | 5 |
| 4. Transport and delivery | 5 |
| 4.1 Delivery | 5 |
| 4.2 Unpacking | 5 |
| 4.3 Intermediate storage | 5 |
| 4.4 Returning the unit to the factory for repair or evaluation | 5 |
| 5. Product Overview | 6 |
| 6. Installation | 8 |
| 6.1 General information on installation | 8 |
| 6.2 Location | 8 |
| 6.3 Piping | 8 |
| 6.4 Suction piping | 8 |
| 6.5 Discharge piping | 9 |
| 7. Electrical connections | 9 |
| 7.1 Power connections | 9 |
| 8. Start-up/shutdown | 10 |
| 8.1 Start-up inspection | 10 |
| 8.1A Purging air from the hydraulic side | 10 |
| 8.1B Purging air from the process side | 10 |
| 8.2 Pump calibration | 10 |
| 9. Maintenance and repair w/ parts breakdown | 11 |
| 9.1 Preventative maintenance | 11 |
| 9.2 Recommended spare parts (for metallic liquid end) | 11 |
| 9.3 Oil change | 11 |
| 9.4 Check valves | 11 |
| 9.4A Series 2000 check valve replacement - plastic | 11 |
| 9.4B Series 2000 check valve replacement - metallic | 12 |
| 9.5 Diaphragm replacement | 12 |
| 9.6 Adjusting internal relief valve | 13 |
| 9.7 Replacing gear shaft o-rings | 13 |
| 10. Drawings and diagrams | 14 |
| 11. Additional drawings and diagrams | 18 |
| 12. Pump troubleshooting chart | 25 |

Warning

These complete installation and operating instructions are also available on www.aquflow.com.

Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.



1. General information

1.1 Introduction

These installation and operating instructions contain all the information required for starting up and handling the hydraulic diaphragm dosing pump.

If you require further information or if any problems arise, which are not described in detail in this manual, please contact AquFlow.

1.2 Service documentation

If you have any questions, please contact the nearest AquFlow distributor or factory directly.

1.3 Applications

The AquFlow pump is suitable for liquid, non-abrasive and non-inflammable media strictly in accordance with the instructions in this manual.

Note

Explosion-proof pumps are identified from the pump and motor nameplates.

Warning

To operate a pump which has been identified as an explosion-proof pump for the dosing of inflammable media or for operation in potentially explosive operating sites, consult factory with details.



Warning

Other applications or the operation of pumps in ambient and operating conditions, which are not approved, are considered improper and are not permitted. AquFlow accepts no liability for any damage resulting from incorrect use.



1.4 Warranty

Warranty in accordance with our general terms of sale and delivery is only valid

- if the pump is used in accordance with the information within this manual.
- if the pump is not dismantled or incorrectly handled.
- if repairs are carried out by authorized and qualified personnel.






2. Safety

This manual contains general instructions that must be observed during installation, operation and maintenance of the pump. This manual must therefore be read by the installation engineer and the relevant qualified personnel/operators prior to installation and start-up, and must be available at the installation location of the pump at all times.

It is not only the general safety instructions given in this "Safety" section that must be observed, but all special safety instructions given in the other sections.

2.1 Identification of safety instructions in this manual

If the safety instructions or other advice in this manual are not observed, it may result in personal injury or malfunction and damage to the pump. The safety instructions and other advice are identified by the following symbols:

| Warning signs | Type of danger |
|---|---------------------------------|
|  | Warning – hand injuries. |
|  | Warning – high-voltage. |
|  | Warning – flammable substances. |
|  | Warning – hot surface. |
|  | Warning – danger zone. |

2.2 Qualification and training of personnel

The personnel responsible for the operation, maintenance, inspection and installation must be appropriately qualified for these tasks. Areas of responsibility, levels of authority and the supervision of the personnel must be precisely defined by the operator.

If the personnel do not have the necessary knowledge, the necessary training and instruction must be given. If necessary, training can be performed by the manufacturer/supplier at the request of the operator of the pump. It is the responsibility of the operator to make sure that the contents of this manual are understood by the personnel.

2.3 Risks when safety instructions are not observed

Non-observance of the safety instructions may have dangerous consequences for the personnel, the environment and the pump. If the safety instructions are not observed, all rights to claims for damages may be lost. Non-observance of the safety instructions may lead to the following hazards:

- failure of important functions of the pump/system
- failure of specified methods for maintenance
- harm to humans from exposure to electrical, mechanical and chemical influences
- damage to the environment from leakage of harmful substances.

2.4 Safety-conscious working

The safety instructions in this manual, applicable national health and safety regulations and any operator internal working, operating and safety regulations must be observed.

2.5 Safety instructions for the operator/user

Hazardous hot or cold parts on the pump must be protected to prevent accidental contact.

Leakages of dangerous substances (e.g. hot, toxic) must be disposed of in a way that is not harmful to the personnel or the environment. Legal regulations must be observed.

Damage caused by electrical energy must be prevented.

2.6 Safety instructions for maintenance, inspection and installation work

The operator must ensure that all maintenance, inspection and installation work is carried out by authorised and qualified personnel, who have been adequately trained by reading this manual.

All work on the pump should only be carried out when the pump is stopped. The procedure described in this manual for stopping the pump must be observed.

Pumps or pump units which are used for media that are harmful to health must be decontaminated.

All safety and protective equipment must be immediately restarted or put into operation once work is complete.

Observe the points described in the initial start-up section prior to subsequent start-up.

Warning



Make sure that the pump is suitable for the actual dosing medium! Observe the chemical manufacturer's safety instructions when handling chemicals! Do not operate the pump next to closed valves (dead head).

Warning



The pump housing, control unit and sensors must only be opened by personnel authorised by AquFlow! Repairs must only be carried out by authorised and qualified personnel! Wear protective clothing (gloves and goggles) when working on the dosing head, connections or lines! Before removing the dosing head, valves and lines, empty any remaining medium in the dosing head into a drip tray by carefully unscrewing the suction valve.

Caution

The resistance of the parts that come into contact with the media depends on the media, media temperature and operating pressure. Ensure that parts in contact with the media are chemically resistant to the dosing medium under operating conditions!

2.7 Unauthorised modification and manufacture of spare parts

Modification or changes to the pump are only permitted following agreement with the manufacturer. Original spare parts and accessories authorised by the manufacturer are safe to use. Using other parts can result in liability for any resulting consequences. Additionally, it voids the warranty immediately.

2.8 Improper operating methods

The operational safety of the supplied pump is only ensured if it is used in accordance with section 3. *Technical data*. The specified limit values must under no circumstances be exceeded.

Note

Explosion-proof pumps are identified from the pump and motor nameplates. An EC declaration of conformity is provided in accordance with the EC directive 94/9/EC, the so-called ATEX directive. This declaration of conformity replaces the declaration of conformity in this manual.



Warning
To operate a pump which has been identified as an explosion-proof pump for the dosing of inflammable media or for operation in potentially explosive operating sites in accordance with the EC directive 94/9/EC, refer to the enclosed manual "ATEX-approved pumps" in addition to this manual.

If the assumption is made that a safe operation is no longer possible, switch off the pump and protect it against unintentional operation.

This action should be taken

- if the pump has been damaged.
- if the pump no longer seems to be operational.
- if the pump has been stored for an extended period of time in poor conditions.

2.9 Safety of the system in the event of a failure in the dosing system

AquFlow dosing pumps are designed according to the latest technologies and are carefully manufactured and tested. However, a failure may occur in the dosing system. Systems in which dosing pumps are installed must be designed in such a way that the safety of the entire system is still ensured following a failure of the dosing pump. Provide the relevant monitoring and control functions for this.

PRECAUTIONS

The following precautions should be taken when working with metering pumps.

Please read this section carefully prior to installation.

Protective Clothing



ALWAYS wear protective clothing, face shield, safety glasses and gloves when working on or near your metering pump. Additional precautions should be taken depending on the solution being pumped. Refer to **Material Safety Data Sheets** for the solution being pumped.

Hearing Protection



It is recommended that hearing protection be used if the pump is in an environment where the time-weighted average sound level (TWA) of 85 decibels is exceeded. (as measured on the A scale -- slow response)

Electrical Safety



- Remove power and ensure that it remains off while maintaining pump.
- **DO NOT FORGET TO CONNECT THE PUMP TO EARTH**
- Electric protection of the motor (Thermal protection or by means of fuses) is to correspond to the rated current indicated on the motor data plate.

Liquid Compatibility



Verify if the materials of construction of the wetted components of your pump are recommended for the solution (chemical) to be pumped.

Pumps Water "Primed"



All pumps are tested with water at the factory. If your process solution is not compatible with water, flush the **Pump Head Assembly** with an appropriate solution before introducing the process solution.

Plumbing and Electrical Connections



Always adhere to your local plumbing and electrical codes.

Line Depressurization



To reduce the risk of chemical contact during disassembly or maintenance, the suction and discharge lines should be depressurized before servicing.

Over Pressure Protection



To ensure safe operation of the system it is recommended that some type of safety/pressure-relief valve be installed to protect the piping and other system components from damage due to over-pressure.

Lifting



This manual should be used as a guide only - Follow your company's recommended lifting procedures. It is not intended to replace or take precedence over recommendations, policies and procedures judged as safe due to the local environment than what is contained herein. Use lifting equipment that is rated for the weight of the equipment to be lifted.

WARNING:
**LOCKOUTS ARE REQUIRED BEFORE
SERVICING THIS EQUIPMENT**

SAFETY INSTRUCTIONS:
Shut off/Lockout pump power before servicing.
Be certain isolation valves are
closed-chemical is shut off.
Bleed pressure before servicing.

3. Technical Data

SERIES 2000

Features

- Flow capacities up to 180 GPH (Duplex)
- Pressure Up to 1,800 PSIG
- Modular design in aluminum housing
- Metering accuracy +/- 1%
- Easy capacity controls – manual/auto
- Built in safety – Internal relief valve
- Available in duplex to double flow capacity
- Ability to handle difficult liquids like slurries, off-gasing, and high viscosities

Specifications

Flow capacity adjustment – 0-100%

While the pump is running or stopped

| | |
|-------------------------|--------------------------|
| <i>Turndown Ratio</i> | <i>Metering accuracy</i> |
| Stroke length – 20:1 | Steady state - +/- 1 % |
| Stroke frequency – 20:1 | Linearity - +/- 1% |
| Combined – 200:1 | Combined - +/- 1% |

Maximum process fluid temperature

Custom engineered metallic liquid end: 500F

Metallic liquid end/PTFE diaphragm: 250F (121C)

Plastic Head: 140F (60C)

Plunger stroke length: 1-1/2"

Hydraulic oil capacity: 4 qts (Simplex & Duplex)

Displacement per stroke - by plunger size

5/8" - 0.2938 cu. in. (4.81 ml)

3/4" - 0.6976 cu. in. (11.43 ml)

1" - 1.1334 cu. in. (18.57 ml)

1-1/4" - 1.8757 cu. in. (30.74 ml)

1-1/2" - 2.0797 cu. in. (34.08 ml)

Liquid End Material Options

316SS, Alloy 20, Hastelloy C, PVC, PVDF, and PTFE

Series 2000 Performance Table:

| AquFlow Model Number | Capacity GPH (LPH) | Pressure PSIG (bars) | Speed (SPM) | Plunger Diameter |
|----------------------|--------------------|----------------------|-------------|------------------|
| CD3T 0529-0X014 | 3.98 (10.6) | 1,800 (124) | 29 | 5/8" |
| CD3T 0558-0X014 | 7.97 (21.2) | | 58 | |
| CD3T 0597-0X014 | 13.3 (36.0) | | 97 | |
| CD3T 0512-0X014 | 16.07 (43.2) | | 117 | |
| CD3T 0514-0X014 | 19.2 (51.9) | | 140 | |
| CD3T 0519-0X014 | 26.2 (70.8) | 1,000 (69) | 191 | 3/4" |
| CD3T 0629-0X014 | 4.7 (17.8) | | 29 | |
| CD3T 0658-0X014 | 9.4 (35.6) | | 58 | |
| CD3T 0697-0X014 | 15.7 (59.8) | | 97 | |
| CD3T 0612-0X014 | 19.0 (71.9) | | 117 | |
| CD3T 0614-0X014 | 22.7 (85.6) | | 140 | |
| CD3T 0619-0X015 | 31.0 (117.3) | | 191 | |
| CD3T 0829-0X014 | 7.68 (28.8) | 360 (25) | 29 | 1" |
| CD3T 0858-0X014 | 15.37 (57.5) | | 58 | |
| CD3T 0897-0X014 | 25.7 (96.1) | | 97 | |
| CD3T 0812-0X015 | 31.0 (115.8) | | 117 | |
| CD3T 0814-0X015 | 37.09 (138.9) | | 140 | |
| CD3T 0819-0X015 | 50.61 (189.3) | | 191 | |
| CD3T 1029-0X014 | 12.67 (45.4) | 210 (14) | 29 | 1-1/4" |
| CD3T 1058-0X014 | 25.35 (90.8) | | 58 | |
| CD3T 1097-0X018 | 42.39 (151.4) | | 97 | |
| CD3T 1012-0X018 | 51.13 (185.5) | | 117 | |
| CD3T 1014-0X018 | 61.18 (227.1) | | 140 | |
| CD3T 1019-0X018 | 83.47 (302.8) | | 191 | |
| CD3T 1229-0X014 | 16.0 (53.0) | 195 (13) | 29 | 1-1/2" |
| CD3T 1258-0X015 | 32.07 (106.0) | | 58 | |
| CD3T 1297-0X018 | 53.63 (177.9) | | 97 | |
| CD3T 1212-0X018 | 64.68.0 (212.0) | | 117 | |
| CD3T 1214-0X018 | 77.4 (253.6) | | 140 | |
| CD3T 1219-0X018 | 105.6 (340.6) | | 191 | |

4. Transport and Delivery

4.1 Delivery

Your new AquFlow metering pump will be shipped mounted on a 3/4" thick plywood inside a master carton with a cardboard insert for both strength of the carton, but also to prevent the pump from moving inside the carton during transportation.

Carefully check the packaging for any signs of damages. Take pictures if necessary and have the delivery driver sign for these damages when submitting transportation damage claims.

4.2 Unpacking

Your pump will have at least the following:

- Pump unit mounted on a 3/4" plywood
- 2 qt. of Hydraulic oil
- Instruction manual

Check the pump's label to make sure that the model and capacity is exactly what you ordered. Check the motor's nameplate for the correct voltage according to your specification and that it matches with the supply voltage to run the motor installed on your pump.



Please visit www.aquflowpumps.com/videos to view the unpacking procedure.

4.3 Intermediate storage

1. If the pump is to be stored for a period not exceeding six months, leave the pump in its original packaging in upright position, but fill the pump with hydraulic oil to capacity to protect internal components from moisture contamination.
2. Store the pump in a dry environment.
3. If storing the pump for more than 6 months, run the pump for a few minutes every 6 months to prevent oil deposit from forming.

4.4 Returning the unit to the factory for repair or evaluation

1. Call the factory and get an RMA (Return Material Authorization) number. The factory or its agent will send you an RMA form to fill out. This form will be required to be e-mailed back.
 2. Drain the oil from the pump and replace the drain plug.
 3. Remove and do not send the motor if instructed by the factory or its agent to save on freight cost.
 4. Completely drain and flush the process fluid from the pump, neutralizing the fluid with water. Failure to do so could result in your pump being rejected by the factory and returned to you at your cost. No traces of any chemical should be left in the pump being returned.
 5. Pack the unit properly.
 6. Attach the RMA form and any MSDS of the liquid used on your pump.
 7. Ship the pump and advise the factory of the tracking number.
- If the pump is damaged through shipping, the customer will be responsible for that damage.

AQUFLOW PUMP LABEL

Always have the complete pump model and serial number available when contacting Aquflow for parts or service. This model number can be found on the data plate mounted on the back of the pump housing.

| | |
|--------------------------------------|------------------------|
| AquFlow® | |
| CHEMICAL METERING PUMP | |
| MODEL | CD3T 0829-04014 |
| SERIAL | 1234567 |
| CAPACITY | 7.68 GPH |
| PRESSURE | 360 PSIG |
| Phone: 949-757-1753 | |
| sales@aquflow.com www.aquflow.com | |

5. Product Overview

AQUFLOW HYDRAULIC METERING PUMP MODEL CODE

Typical AquFlow Model:

AAAB CC(C)DD--EEFFGH(HP)

AAA: AquFlow Pump Series Identifier

Series 900 - DM3 (Standard), DL4, DL3, etc.
Series 1000 - CJ4 (Standard), CA4, CJ3, etc.
Series 2000 - CD3 (Standard), CR3, CQ3, CL3, etc.
Series 3000 - CNI (Standard), KBI, HFI, CMI etc.
Series 4000 - GNI (Standard), GMI etc

B: Main Pumping Element

T = Single PTFE Disc Diaphragm
W = Double PTFE Disc Diaphragm
A = Single Hypalon Tube
B = Single Viton Tube

CC/CCC: Plunger Diameter

| | |
|--------------------|--------------------|
| <i>Series 1000</i> | <i>Series 3000</i> |
| 38 = 3/8" | 08 = 1" |
| 56 = 9/16" | 10 = 1-1/4" |
| 75 = 3/4" | 12 = 1-1/2" |
| 87 = 7/8" | 14 = 1-3/4" |
| 113 = 1-1/8" | 16 = 2" |
| 162 = 1-5/8" | 18 = 2-1/4" |
| | 20 = 2-1/2" |

| | |
|--------------------|--------------------|
| <i>Series 2000</i> | <i>Series 4000</i> |
| 05 = 5/8" | 07 = 7/8" |
| 06 = 3/4" | 09 = 1-1/8" |
| 08 = 1" | 13 = 1-9/16" |
| 10 = 1-1/4" | 20 = 2-1/2" |
| 12 = 1-1/2" | 24 = 3" |
| | 32 = 4" |

DD: Strokes Per Minute

29 = 29 SPM
44 = 44 SPM
58 = 58 SPM
88 = 88 SPM
97 = 97 SPM
12 = 117 SPM
14 = 140 SPM
17 = 170 SPM
19 = 190 SPM

EE: Liquid End Material

04 = 316 Stainless Steel
05 = Alloy 20
06 = Hastelloy C
08 = PVC
0A = Kynar (PVDF)

FF: Configuration Code

01 = Simplex Manual Adjustment
02 = Duplex Manual Adjustment
03 = Simplex Pneumatic Adjustment
04 = Duplex Pneumatic Adjustment
05 = Simplex Electronic (4-20mA)
06 = Duplex Electronic (4-20mA)

G: Valve Ball Size

| | | |
|------------------|------------------|-----------------------|
| 3 = 1/4" | 8 = 7/8" | D = 2" Disc Valve |
| 4 = 3/8" | 9 = 1" | E = 2-1/4" Disc Valve |
| 5 = 1/2" | A = 1-1/4" | F = 2-1/2" Disc Valve |
| 6 = 5/8" | B = 1-1/2" | G = 3" Disc Valve |
| 7 = 3/4" | C = 1-3/4" | H = 4" Disc Valve |
| V = 1/2" Double | W = 7/8" Double | Z = 3/8" Double |
| Ball Valve Check | Ball Valve Check | Ball Valve Check |

H: Liquid Connection

Blank = NPT F = Flange X = Other

I: Degassing Valve

Blank = No degassing valve D = Degassing valve

HP: High Pressure For a high pressure pump, add (HP) to model code

AquFlow Also Offers: SERIES 1000

Features

- Flow capacities up to 61 GPH (Simplex), 123 GPH (Duplex)
- Pressure Up to 4,000 PSI
- Unibody Design – Less Parts
- Metering accuracy +/- 1%
- Easy capacity controls – manual/auto
- Built in safety – Internal relief valve
- Available in duplex to double flow capacity
- Ability to handle difficult liquids like slurries, off-gasing, and high viscosities

Specifications

Flow capacity adjustment – 0-100%
While the pump is running or stopped

| | |
|-------------------------|--------------------------|
| <i>Turndown Ratio</i> | <i>Metering Accuracy</i> |
| Stroke length – 10:1 | Steady state - +/- 1 % |
| Stroke frequency – 10:1 | Linearity - +/- 1% |
| Combined – 100:1 | Combined - +/- 1% |

Maximum process fluid temperature

Custom engineered metallic liquid end: 500F
Metallic liquid end/PTFE diaphragm: 250F (121C)
Plastic Head: 140F (60C)
Plunger stroke length: 0.75
Hydraulic oil capacity: 2qts (simplex) 3qts (Duplex)

Displacement per stroke - by plunger size

3/8" - 0.08257 cu. in. (1.353 ml)
9/16" - 0.18595 cu. in. (3.047 ml)
3/4" - 0.33073 cu. in. (5.419 ml)
7/8" - 0.450246 cu. in. (7.378 ml)
1-1/8" - 0.78649 cu. in. (12.888 ml)
1-5/8" - 1.5537 cu. in. (25.461 ml)

Liquid End Material Options

316SS, Alloy 20, Hastelloy C, PVC, PVDF, and PTFE

Series 1000 Performance Table:

| AquFlow Model Number | Capacity GPH (LPH) | Pressure PSIG (bars) | Speed (SPM) | Plunger Diameter |
|----------------------|--------------------|----------------------|-------------|------------------|
| CA4T 3829-0X013 | 0.55 (2.1) | 4,000 (275) | 29 | 3/8" |
| CA4T 3858-0X013 | 1.10 (4.2) | | 58 | |
| CA4T 3897-0X013 | 1.85 (7.0) | | 97 | |
| CA4T 3812-0X013 | 2.25 (8.5) | | 117 | |
| CA4T 3814-0X013 | 2.70 (10.2) | | 140 | |
| CA4T 3817-0X013 | 3.28 (12.4) | | 170 | |
| CJ4T 5629-0X014 | 1.25 (4.7) | 2,000 (75) | 29 | 9/16" |
| CJ4T 5658-0X014 | 2.50 (9.5) | | 58 | |
| CJ4T 5697-0X014 | 4.20 (15.9) | | 97 | |
| CJ4T 5612-0X014 | 5.10 (19.3) | | 117 | |
| CJ4T 5614-0X014 | 6.09 (23.1) | | 140 | |
| CJ4T 5617-0X014 | 7.40 (28.0) | | 170 | |
| CJ4T 7529-0X014 | 2.25 (8.5) | 1,100 (75) | 29 | 3/4" |
| CJ4T 7558-0X014 | 4.50 (17.1) | | 58 | |
| CJ4T 7597-0X014 | 7.50 (28.4) | | 97 | |
| CJ4T 7512-0X014 | 9.05 (34.3) | | 117 | |
| CJ4T 7514-0X014 | 10.8 (40.9) | | 140 | |
| CJ4T 7517-0X014 | 13.1 (49.6) | | 170 | |
| CJ4T 8729-0X014 | 3.05 (11.5) | 700 (48) | 29 | 7/8" |
| CJ4T 8758-0X014 | 6.10 (23.0) | | 58 | |
| CJ4T 8797-0X014 | 10.2 (38.6) | | 97 | |
| CJ4T 8712-0X014 | 12.5 (47.3) | | 117 | |
| CJ4T 8714-0X014 | 14.7 (55.6) | | 140 | |
| CJ4T 8717-0X014 | 17.9 (67.8) | | 170 | |
| CJ4T 11329-0X014 | 5.33 (20.2) | 425 (48) | 29 | 1-1/8" |
| CJ4T 11358-0X014 | 10.6 (40.1) | | 58 | |
| CJ4T 11397-0X014 | 17.8 (67.4) | | 97 | |
| CJ4T 11312-0X014 | 22.0 (83.3) | | 117 | |
| CJ4T 11314-0X014 | 25.7 (97.3) | | 140 | |
| CJ4T 11317-0X014 | 31.1 (117.7) | | 170 | |
| CJ4T 16229-0X018 | 10.5 (39.7) | 200 (13) | 29 | 1-5/8" |
| CJ4T 16258-0X018 | 21.0 (79.5) | | 58 | |
| CJ4T 16297-0X018 | 35.3 (133.6) | | 97 | |
| CJ4T 16212-0X018 | 42.5 (160.9) | | 117 | |
| CJ4T 16214-0X018 | 50.8 (192.3) | | 140 | |
| CJ4T 16217-0X018 | 61.7 (233.5) | | 170 | |

AquFlow Also Offers: SERIES 3000

Features

- Flow capacities up to 920 GPH (Duplex)
- Pressure Up to 700 PSI
- Modular design in aluminum housing
- Metering accuracy +/- 1%
- Easy capacity controls – manual/auto
- Built in safety – Internal relief valve
- Available in duplex to double flow capacity
- Ability to handle difficult liquids like slurries, off-gasing, and high viscosities

Specifications

Flow capacity adjustment – 0-100%
While the pump is running or stopped

| | |
|-------------------------|--------------------------|
| <i>Turndown Ratio</i> | <i>Metering Accuracy</i> |
| Stroke length – 36:1 | Steady state - +/- 1 % |
| Stroke frequency – 36:1 | Linearity - +/- 1% |
| Combined – 360:1 | Combined - +/- 1% |

Maximum process fluid temperature

Custom engineered metallic liquid end: 500F
Metallic liquid end/PTFE diaphragm: 250F (121C)
Plastic Head: 140F (60C)
Plunger stroke length: 3"
Hydraulic oil capacity: 12 qts

Displacement per stroke - by plunger size

1" - 2.3469 cu. in. (38.46 ml)
1-1/4" - 3.6738 cu. in. (60.20 ml)
1-1/2" - 5.2906 cu. in. (86.70 ml)
1-3/4" - 7.2063 cu. in. (118.09 ml)
2" - 9.4102 cu. in. (154.21 ml)
2-1/4" - 11.9023 cu. in. (195.04 ml)
2-1/2" - 14.1561 cu. in. (231.98 ml)

Liquid End Material Options

316SS, Alloy 20, Hastelloy C, PVC, PVDF, and PTFE

Series 3000 Performance Table:

| AquFlow Model Number | Capacity GPH (LPH) | Pressure PSIG (bars) | Speed (SPM) | Plunger Diameter |
|----------------------|--------------------|----------------------|-------------|------------------|
| CNIT 0844-0X018 | 24.1 (60.2) | 700 (48) | 44 | 1" |
| CNIT 0858-0X018 | 31.9 (120.7) | | 58 | |
| CNIT 0888-0X018 | 48.0 (181.7) | | 88 | |
| CNIT 0812-0X018 | 64.0 (242.3) | | 117 | |
| CNIT 0814-0X018 | 76.0 (287.7) | | 140 | |
| CNIT 1044-0X018 | 37.8 (94.6) | 405 (28) | 44 | 1-1/4" |
| CNIT 1058-0X018 | 50.0 (189.3) | | 58 | |
| CNIT 1088-0X018 | 75.7 (286.5) | | 88 | |
| CNIT 1012-0X018 | 100 (378.5) | | 117 | |
| CNIT 1014-0X018 | 120 (454.2) | | 140 | |
| CNIT 1244-0X018 | 54.4 (135.9) | 265 (18) | 44 | 1-1/2" |
| CNIT 1258-0X018 | 71.8 (271.8) | | 58 | |
| CNIT 1288-0X018 | 109 (412.6) | | 88 | |
| CNIT 1212-0X018 | 145 (548.9) | | 117 | |
| CNIT 1214-0X01A | 173 (654.9) | | 140 | |
| CNIT 1444-0X018 | 74 (185.1) | 180 (12) | 44 | 1-3/4" |
| CNIT 1458-0X018 | 97.8 (370.2) | | 58 | |
| CNIT 1488-0X018 | 148 (560.2) | | 88 | |
| CNIT 1412-0X01A | 197 (745.7) | | 117 | |
| CNIT 1414-0X01A | 236 (893.4) | | 140 | |
| CNIT 1644-0X018 | 96.8 (241.9) | 130 (9) | 44 | 2" |
| CNIT 1658-0X018 | 128 (484.5) | | 58 | |
| CNIT 1688-0X01A | 194 (724.4) | | 88 | |
| CNIT 1612-0X01B | 258 (976.6) | | 117 | |
| CNIT 1614-0X01B | 308 (1,165.9) | | 140 | |
| CNIT 1844-0X018 | 122.4 (305.9) | 95 (6) | 44 | 2-1/4" |
| CNIT 1858-0X018 | 161 (609.5) | | 58 | |
| CNIT 1888-0X01A | 245 (927.4) | | 88 | |
| CNIT 1812-0X01B | 326 (1,234.0) | | 117 | |
| CNIT 1814-0X01C | 389 (1,476.3) | | 140 | |
| CNIT 2044-0X018 | 145 (378.5) | 75 (5) | 44 | 2-1/2" |
| CNIT 2058-0X01A | 191 (757.1) | | 58 | |
| CNIT 2088-0X01B | 291 (1,135.6) | | 88 | |
| CNIT 2012-0X01C | 387 (1,514.2) | | 117 | |
| CNIT 2014-0X01C | 463 (1,824.6) | | 140 | |

AquFlow Also Offers: SERIES 4000

Features

- Flow capacities up to 3530 GPH (Duplex)
- Pressure Up to 3,500 PSI
- Modular design in aluminum housing
- Metering accuracy +/- 1%
- Easy capacity controls – manual/auto
- Built in safety – Internal relief valve
- Available in duplex to double flow capacity
- Ability to handle difficult liquids like slurries, off-gasing, and high viscosities

Specifications

Flow capacity adjustment – 0-100%
While the pump is running or stopped

| | |
|-------------------------|--------------------------|
| <i>Turndown Ratio</i> | <i>Metering Accuracy</i> |
| Stroke length – 48:1 | Steady state - +/- 1 % |
| Stroke frequency – 48:1 | Linearity - +/- 1% |
| Combined – 480:1 | Combined - +/- 1% |

Maximum process fluid temperature

Custom engineered metallic liquid end: 500F
Metallic liquid end/PTFE diaphragm: 250F (121C)
Plastic Head: 140F (60C)
Plunger stroke length: 4.01"
Hydraulic oil capacity: 52 qts

Displacement per stroke - by plunger size

7/8" - 2.2698 in (37.19 ml)
1-1/8" - 3.8013 in (62.29 ml)
1-9/16" - 7.6453 in (125.29 ml)
2-1/2" - 19.63 in (321.77 ml)
3" - 28.1989 in (462.12 ml)
4" - 50.34 (824.99 ml)

Liquid End Material Options

316SS, Alloy 20, Hastelloy C, PVC, PVDF, and PTFE

Series 4000 Performance Table:

| AquFlow Model Number | Capacity GPH (LPH) | Pressure PSIG (bars) | Speed (SPM) | Plunger Diameter |
|----------------------|--------------------|----------------------|-------------|------------------|
| GNIT 0744-0X01A | 22.6 (85.5) | 3,500 (241) | 44 | 7/8" |
| GNIT 0770-0X01A | 36.0 (136.3) | | 70 | |
| GNIT 0788-0X01A | 45.0 (170.3) | | 88 | |
| GNIT 0714-0X01A | 72.0 (272.5) | | 140 | |
| GNIT 0944-0X01A | 38.5 (145.7) | 2,000 (138) | 44 | 1-1/8" |
| GNIT 0970-0X01A | 61.5 (232.8) | | 70 | |
| GNIT 0988-0X01A | 77.0 (291.5) | | 88 | |
| GNIT 0914-0X01A | 123 (465.6) | | 140 | |
| GNIT 1344-0X01F | 79.5 (300.9) | 1,000 (69) | 44 | 1-9/16" |
| GNIT 1370-0X01F | 126 (477.0) | | 70 | |
| GNIT 1388-0X01F | 159 (601.9) | | 88 | |
| GNIT 1314-0X01F | 253 (957.7) | | 140 | |
| GNIT 2044-0X01F | 210 (794.9) | 370 (26) | 44 | 2-1/2" |
| GNIT 2070-0X01F | 335 (1,268.1) | | 70 | |
| GNIT 2088-0X01F | 421 (1,593.7) | | 88 | |
| GNIT 2014-0X01F | 671 (2,540.0) | | 140 | |
| GNIT 2444-0X01H | 304 (1,150.8) | 295 (20) | 44 | 3" |
| GNIT 2470-0X01H | 485 (1,835.9) | | 70 | |
| GNIT 2488-0X01H | 609 (2,305.3) | | 88 | |
| GNIT 2414-0X01H | 970 (3,671.8) | | 140 | |
| GNIT 3244-0X01H | 554 (2,097.1) | 160 (11) | 44 | 4" |
| GNIT 3270-0X01H | 882 (3,338.7) | | 70 | |
| GNIT 3288-0X01H | 1,109 (4,198.0) | | 88 | |
| GNIT 3214-0X01H | 1,765 (6,681.2) | | 140 | |

AquFlow Also Offers: SERIES 900

Features

- Flow capacities up to 6.5 GPH (Duplex)
- Pressure Up to 3,000 PSI
- Modular design in aluminum housing
- Metering accuracy +/- 1%
- Easy capacity controls – manual/auto
- Built in safety – Internal relief valve
- Available in duplex to double flow capacity
- Ability to handle difficult liquids like slurries, off-gasing, and high viscosities

Specifications

Flow capacity adjustment – 0-100%
While the pump is running or stopped

| | |
|-------------------------|--------------------------|
| <i>Turndown Ratio</i> | <i>Metering Accuracy</i> |
| Stroke length – 10:1 | Steady state - +/- 1 % |
| Stroke frequency – 10:1 | Linearity - +/- 1% |
| Combined – 100:1 | Combined - +/- 1% |

Maximum process fluid temperature

Custom engineered metallic liquid end: 500F
Metallic liquid end/PTFE diaphragm: 250F (121C)
Plastic Head: 140F (60C)
Plunger stroke length: 0.754"
Hydraulic Oil Type F capacity: 1 qts
Gear Oil capacity: 1 qts

Displacement per stroke - by plunger size

3/16" - 0.0207 in (0.33 ml)
1/4" - 0.0368 in (0.60 ml)
3/8" - 0.0828 in (1.35 ml)

Liquid End Material Options

316SS, Alloy 20, Hastelloy C, PVC, PVDF, and PTFE

Series 900 Performance Table:

| AquFlow Model Number | Capacity GPH (LPH) | Pressure PSIG (bars) | Speed (SPM) | Plunger Diameter |
|----------------------|--------------------|----------------------|-------------|------------------|
| DM3T 1929-0X013 | 0.14 (0.53) | 3,000 (200) | 29 | 3/16" |
| DM3T 1958-0X013 | 0.28 (1.06) | | 58 | |
| DM3T 1997-0X013 | 0.47 (1.78) | | 97 | |
| DM3T 1912-0X013 | 0.56 (2.12) | | 117 | |
| DM3T 1914-0X013 | 0.67 (2.54) | | 140 | |
| DM3T 1917-0X013 | 0.82 (3.10) | 3,000 (200) | 170 | 1/4" |
| DM3T 2529-0X013 | 0.24 (0.91) | | 29 | |
| DM3T 2558-0X013 | 0.49 (1.85) | | 58 | |
| DM3T 2597-0X013 | 0.82 (3.10) | | 97 | |
| DM3T 2512-0X013 | 1.00 (3.79) | | 117 | |
| DM3T 2514-0X013 | 1.19 (4.50) | 3,000 (200) | 140 | 3/8" |
| DM3T 2517-0X013 | 1.44 (5.45) | | 170 | |
| DM3T 3829-0X013 | 0.55 (2.08) | | 29 | |
| DM3T 3858-0X013 | 1.11 (4.20) | | 58 | |
| DM3T 3897-0X013 | 1.86 (7.04) | | 97 | |
| DM3T 3812-0X013 | 2.24 (8.48) | 3,000 (200) | 117 | |
| DM3T 3814-0X013 | 2.69 (10.18) | | 140 | |
| DM3T 3817-0X013 | 3.25 (12.30) | | 170 | |

6. Installation

Note

If pump is not going to be installed immediately, but will be placed in storage for a period not exceeding 6 months, see Section 4.3 for instructions.

6.1 General information on installation

Prior to shipment, each pump is factory tested under application hydraulic conditions, using water. The internal relief valve is preset to meet the operating conditions specified on the purchase order, and the pump is fully assembled and ready for installation. Protective caps are used to cover the suction and discharge check valves during shipment, and containers of hydraulic oil have been included in the shipping carton.

When unpacking the pump, make certain that no loose components are accidentally discarded. Examine the pump for shipping damage. If damage has occurred, a claim must be filed with the freight carrier within 24 hours.

6.2 Location

1. The pump installation site should provide easy access for capacity adjustment, routine maintenance, and where possible, to protect the pump from the elements and from leaks or drips from other process equipment.
2. The pump should be located on a level surface. While not required, it is suggested that the pump be bolted on a concrete pad or slightly raised platform above floor level to protect pump from washdowns.
3. Pumps installed outdoors should be shaded from direct sunlight and protected from the elements. Direct sunshine and ambient temperatures above 90°F could cause excessive hydraulic oil and motor temperatures.

Installations with ambient temperatures outside 50-100°F require changing the oil to a different viscosity index to assure reliable performance. In extreme old temperatures, insulation and heat tracing maybe required.

6.3 Piping

1. The Aquflow® Series 2000 is a reciprocating motion type pump. Therefore, size the piping system to accommodate peak instantaneous flow which is 3.14 times pump capacity (example: 60gph x 3.14 = 188 gph). Failure to do so may restrict fluid flows, resulting in erratic pump performance.
2. Piping materials selected must be resistant to corrosion by the liquid being pumped, and rated to withstand maximum pressure and temperatures of the system.
3. When determining pipe size, be certain that it is equal to, or the next size larger than, the pump check valve connections.
4. When selecting fittings for use with flexible hose or tubing, be certain that the I.D. is equal to or larger than that of the tubing. Failure to do so may restrict fluid flows, resulting in erratic pump performance.
5. Use pipe sealant(s) sparingly. Excess sealant could dislodge and impede proper check valve operation. Be particularly careful when making pipe connections to plastic pump heads, since use of excessive sealant and/or overtightening may crack plastic pump heads.
6. Shut-off valves and unions installed in the suction and discharge pipelines will facilitate pump servicing. Please refer to Figure 3 for a typical installation.

6.4 Suction piping

1. Before connecting the pump, be certain that the suction piping is completely clean by flushing thoroughly. Failure to do so may result in foreign matter entering and damaging the pump.
2. Keep the suction line as short and straight as possible. A flooded suction or gravity feed of the process fluid to the pump inlet is preferred. A suction line strainer is highly recommended to prevent foreign matter from entering and damaging the pump.

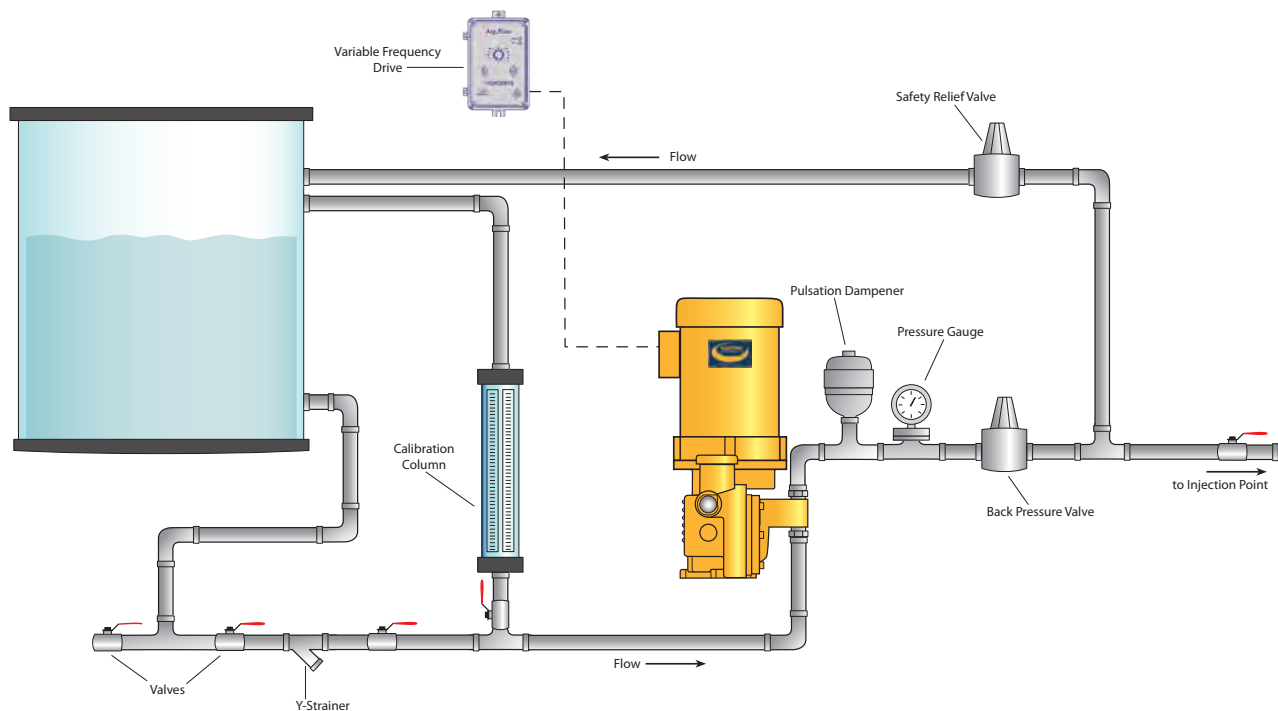


Figure 3. Typical Metering Pump Installation

Note

Please consult factory for suction lift application. Some chemicals tend to off gas more in suction lift. Suction lift applications require the use of a foot valve and strainer to prevent loss of prime and to prevent foreign material from entering the pump.

3. Suction piping must be absolutely airtight to assure accurate pumping. If air or gas is allowed to accumulate inside the pump head, the output will become erratic or stop altogether.
4. Piping should be sloped to prevent the formation of vapor pockets, which could eventually accumulate inside the pump head resulting in erratic pump delivery.
5. Provide necessary pipe supports to avoid placing strain on the pump connections. Flexible connections can be used if pressure permits. If flexible suction line is used, be sure that selection and installation will prevent wall collapse and thus a starved suction condition.
6. Provision should be made in the system to avoid the possibility of running the pump dry. Typically this is accomplished by wiring a low-level shut-off switch mounted in the supply tank to the pump motor starter.
7. Where pump fluids may solidify, crystallize, etc., provision should be made to flush the pump and piping regularly, especially prior to shutdown.

6.5 Discharge piping

1. Install adequately sized pipe with a pressure rating in excess of the pressure relief valve setting.
2. A minimum positive pressure differential of 25 psi between the suction and discharge valves is recommended for proper hydraulic bypass operation and seating of the ball checks. Should normal discharge pressure be less than the suction pressure, an artificial discharge pressure must be created to prevent siphoning. This can be accomplished by the use of a back pressure valve installed in the discharge piping.
3. A properly sized pulsation dampener installed in the discharge pipeline between the pump and back pressure valve will smooth out flow peaks, reduce "water hammer" and protect downstream instrumentation.
4. AquFlow suggests placing a pressure gauge with isolator close to the discharge of the pump to visually see the proper functioning of the pump.

Caution

The internal relief valve is designed only to protect the pump and drive components in the event the piping system is restricted or blocked while the pump is in operation. If there are other sources of pressure or hydraulically isolated sections of piping in the system, an external safety relief valve must be installed in the pump discharge line as close to the pump as possible, and BEFORE any isolation valve. The safety relief valve should be piped back to the suction tank or safety drain as shown in Figure 3.

5. We also strongly suggest that the back pressure valve be located as close to the discharge valve of the pump as possible (in the range of 10 to 20 times the pipe diameter).

7. Electrical Connections

7.1 Power connections

1. Check the nameplate rating of the motor and any auxiliary electrical equipment against the available power supply before making connections. Direction of rotation of the motor is important, and must be clockwise when viewing the motor from the top. Jog the motor to check rotation.
2. Standard wiring and conduit piping practice in accordance with local electrical codes should be followed. A motor starter with properly sized thermal overload heater is recommended.
3. Provide adequate ventilation for the drive motor.

Caution

Motor starters with properly sized thermal overload are recommended for motor protection.

Note

Motors are warranted by the motor manufacturer. You can obtain prompt local service by consulting the motor manufacturer's authorized service station nearest you, as listed on the Internet or in the yellow pages. AquFlow can also assist you in locating this information.



All electrical connections must be done by a qualified electrician!



Please ensure that the nearby environment does not have any flammable liquids/fumes.

8. Start-up/shutdown

8.1 Start-up inspection

Several items should be checked after the pump has been installed and prior to initial start-up.

1. Series 2000 pumps are shipped with hydraulic oil supplied separately in 1-quart containers.


Note

The oil shipped with the pump is for the typical application - operation at ambient temperatures from 50-100°F.



Please visit www.aquflowpumps.com/videos to view how to load oil into the pump.

Remove the reservoir cover and slowly pour in the hydraulic oil until it reaches the level mark shown on the pump housing.

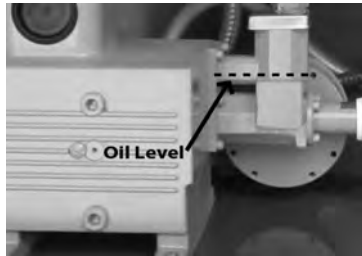

2. Check to be certain that accessory components and fittings have been installed in the proper orientation and sequence as shown in Figure 3.
3. Check to be certain that the electrical supply matches the pump nameplate electrical characteristics.
4. Make certain that suction and discharge valves are open prior to pump start-up.
5. Jog motor to assure proper clockwise rotation.
6. After initial filling, run the pump for 15 minutes with micrometer knob set at 0% to allow hydraulic oil to completely fill all pump cavities, then recheck level and add oil as necessary. Smaller plunger size pumps may require longer running at 0% micrometer setting to fully vent entrained air from the hydraulic oil.
7. It is important that pump suction and discharge lines are free of entrained air. To assure proper start-up, start the pump without any discharge pressure (vented to atmosphere) and with the micrometer set at 0% capacity. Slowly turn the micrometer towards 100% capacity to fill the pumping system with process fluid.

Note

On suction lift applications, it may be necessary to prime the pump by first wetting the ball check valves, and starting the pump without any discharge pressure (vented to atmosphere). Suction lift applications require the use of a footvalve strainer to prevent loss of prime.

8.1A Purging the air from the hydraulic side

It is very important to ensure that there is no trapped air of even the smallest volume on the hydraulic side of the pump. Any trapped air on the hydraulic or process side of the pump will prevent the pump from working accurately. It will use the displacement to compress and expand air instead of pushing the liquid.

An effective way of eliminating air on the hydraulic side is as follows:

1. Start the pump with all valves on the discharge side open while ensuring the capacity adjuster is at 0%.
2. After running so for 15 minutes, slowly turn the capacity adjuster (micrometer) knob to 100%. Smaller plunger pumps may need to run longer.
3. Add oil through the chimney if you see the oil has dropped below the marking.



Please visit www.aquflowpumps.com/videos to view a demonstration of the bleeding air procedure.

4. Turn down the capacity adjuster to 70% for 5-10 minutes and then bring it back up to 100%.

8.1B Purging air from the process side

It is very important to ensure that there is no trapped air of even the smallest volume on the process side of the pump. Any trapped air on the hydraulic or process side of the pump will prevent the pump from working accurately. It will use the displacement to compress and expand air instead of pushing the liquid.

An effective way of eliminating air on the process side is as follows:

1. While you were removing air from the hydraulic side in 8.1A, you had all valves open on the process discharge piping.
2. Run the pump at 100% stroke and 100% speed for 5-10 minutes.
3. Slowly close the Back Pressure Valve to start building pressure.
4. Monitor the pressure on the pressure gauge until it reaches the design pressure.
5. If you do not see the design pressure or the rated flow, open the Back Pressure Valve to let the air out and away.
6. Repeat the opening and closing of the Back Pressure Valve a couple of more time if necessary.
7. If the pump still does not give the rated flow, turn the capacity adjuster (micrometer) knob down to 0%. Then again, slowly increase it back up to 100%.

8.2 Pump calibration

Each pump is tested at the factory prior to shipment to assure proper operation at the capacity and discharge pressure specified. For precise capacity control in the field, a calibration test under actual pumping and piping conditions is recommended. This can be accomplished by allowing the pump to operate at full capacity for a minimum of 30 minutes. This will clear any air out of the pump.

Pump calibration can be accomplished by measuring the decrease in liquid level pumped from a HydroChek™ calibration column installed in the suction line as shown in Figure 3 on page 9. Follow the calibration instructions provided by the cylinder manufacturer. An alternate method of calibration for non-hazardous applications is to collect and measure the fluid metered from the pump discharge port into a graduated cylinder or tank.

Typically, test samples are collected at 25%, 50%, 75% and 100% capacity settings. A straight line results when these points are plotted on a graph. This graph can then be used for intermediate settings, assuming suction and discharge conditions remain constant.



Use extreme care when performing calibration test using open cylinder or tank method, and be extremely careful when working in the presence of hazardous substances. Wear suitable protective clothing and eyeshielding for protection.

It is important to realize that the samples at 50% will not necessarily be exactly 1/2 of that at 100%, nor will any other sample points be a specific percentage of the 100% value. But, the sample value will lie along a straight line that can be used for intermediate settings, and the pump will give repetitive samples at the same setting. This last characteristic is what makes the AquFlow® Series 2000 pump effective; it will meter chemicals precisely within $\pm 1\%$ of capacity set point over long periods of time.

Also, as operating discharge pressures increase, there are additional hydraulic system losses which are constant for any given discharge pressure.

This results in a small decrease in the maximum capacity output of the pump. All AquFlow® capacity/pressure charts used for pump selection have a base pressure rating of 100 psig. For higher discharge pressure decrease maximum capacity by 1.25% for every 100 psig increase.

9. Maintenance and repair w/ parts breakdown




Disconnect and lockout power to the pump before performing service or disassembling the pump.

9.1 Preventative Maintenance

The Series 2000 metering pump is designed for continuous service with maximum reliability and minimum downtime. However, good maintenance procedures dictate that certain visual periodic checks be made to assure that operating problems have not developed.

1. Check the hydraulic oil level periodically, to be sure it is at the proper level mark, and adjust as necessary.
2. Inspect the liquid end assembly, including the suction and discharge connections for any indication of leakage, and correct as necessary.
3. Hydraulic oil should be replaced once a year following the procedures outlined under "Oil Change."

9.2 Recommended spare parts (for metallic liquid end)

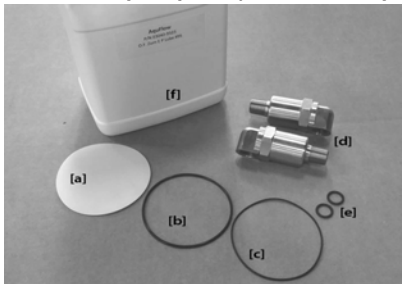

To minimize downtime, the following spare parts should be inventoried to support each pump. These spare parts are available in vacuum-sealed packaging, which provides infinite shelf life when properly stored.

- | | |
|-------------------------|----------------------------|
| (1) Diaphragm [a] | (1) Diaphragm O-Ring [b] |
| (1) Support O-Ring [c] | (2) Check Valve Balls** |
| (2) Check Valve Seats** | (2) Gear Shaft O-Rings [e] |
| (2) Stroke O-Rings | (2) Drive Lubricant [f] |

**Included in Check Valve Assembly [d]

9.3 Oil change

1. Under normal operating conditions the hydraulic oil should be drained and replaced once a year. In severe applications the hydraulic oil should be changed more frequently.
2. Drain hydraulic oil using the drain plug on the side of the pump. (For convenience the drain plug can be replaced with a quick draw fitting or valve and short nipple.)



The recommended lubricant for AquFlow® Series 2000 is Zurn E.P. #95, for normal operation. Various manufacturers' equivalent oils are listed below:

(Indoor, temperature controlled ambient)

| | |
|---------|----------------------|
| ZURN | EP Lube #EP95 |
| Amoco | Permaseal #220 |
| Drydene | E.P. Gear Oil #5 |
| Exxon | Spartan #EP220 |
| Mobil | Mobilgear #630 |
| Shell | Omala #220 |
| Texaco | Meropa #220 |
| ATF | Type F Hydraulic Oil |

For applications with different ambient or fluid temperatures, please consult factory for alternate lubricant recommendations.

9.4 Check valves

9.4A Series 2000 check valve replacement - plastic

AquFlow Series 2000 models with plastic diaphragm heads (whether it is made of PVC or PVDF) have the same internal seat design inside the diaphragm head. Due to the o-rings that are on these seats removal from the diaphragm head can be tricky. The valve seats can be replaced without having to remove the diaphragm head from the pump or draining the oil, and only requires minimal tools.

TOOLS REQUIRED

- Compressed air with about 30 to 40 psiG in the tank and a blow gun attached to the air hose
- A pair of channellock pliers for removing the valve cap
- Hook pick for removing the O-rings
- One ½" hose adapter with ¾" MNPT
- One ½" hose adapter with ½" MNPT
- Long nose pair of pliers
- Shop rags

Refer to sub-assembly drawing on page ***.

The first step is to ensure that the chemical inside the pump has been thoroughly flushed with a neutralizing liquid for your own safety. Refer to the cut-away drawing on page 17 of this manual for component reference.

REMOVAL OF VALVE SEAT

1. After the pump has been completely flushed with neutralizing liquid, remove the inlet and outlet piping to the pump.
2. Remove the Discharge valve cap (9402) from the diaphragm head (9401) using a channel lock pliers by rotating the cap in CCW fashion.
3. Install the ¾" MNPT hose adapter on the inlet side of the diaphragm head. The idea is to introduce sufficient air pressure into the inlet side of the pump just to lift the discharge check valve seat (9403) from its pocket.
4. Put the compressed air blow gun into the hose adapter and with your left index finger press firmly on the ceramic ball (9404). In some cases higher air pressure maybe required to unseat the valve seat from its pocket.
5. Introduce a quick burst of compressed air into the adapter until check valve seat is fully lifted from its pocket in the diaphragm head. Make sure you do not loose the ceramic ball in this process.

6. To remove the suction or inlet valve seat (9403), remove the valve cap (9402) from the suction side of the diaphragm head (9401) using channel lock pliers and rotate in CW fashion.
7. Replace the discharge side valve cap (9402) and install the ½" MNPT hose adapter on discharge side of the diaphragm head.
8. Using the palm of your hand cover the valve cap hole of the suction side to catch the removal of the ball and seat once a short burst of air is introduced into the hose adapter.

INSTALLATION OF NEW CHECK VALVE SEATS

Replacement of AquFlows' check valve seats on Series 1000 is very simple and can be done without having to drain the oil in the pump or removal of the diaphragm head. This instructional video assumes that the seats have been removed from the diaphragm head already and that the seat pockets have been cleaned of any debris. Refer to the cut-away drawing on page 17 of this manual for component reference.

DISCHARGE SIDE

1. Install the o-ring on the valve seat (9403) (if not already installed by the factory) drop in the check valve seat with the rounded profile facing down into the diaphragm head (9401).
2. Replace the o-ring on the valve cap (9402).
3. Place the ceramic ball (9404) on the center hole of the valve seat (9403).
4. Carefully screw in the valve cap (9402) into the diaphragm head making sure not to cross the threads. Tighten the cap with a channel lock pliers until the head of the valve cap (9402) makes contact with the diaphragm head surface.

SUCTION SIDE

1. With one hand hold the valve cap (9402) on it's knurls with the thread facing up.
2. Place the valve seat (9403) on top of the valve cap (9402).
3. Place the ceramic ball on the center hole of the valve seat (9403) and carefully insert these from below the diaphragm head pocket. Make sure that the ball does not fall out of place.
4. Screw in the valve cap into the diaphragm head making sure not to cross the thread.
5. Tighten the cap with a channel lock pliers until the head of the valve cap (9402) makes contact with the diaphragm head surface.

Run the pump following the start up procedure and check the valve cap are for any signs of liquid leaks.

9.4B Series 2000 check valve replacement - metallic

AquFlow's Series 2000 Metallic liquid end uses 4 different types and check ball sizes of check valve assemblies. The most common is the non-serviceable type which must be replaced as a complete assembly.

REMOVAL AND REPLACEMENT

1. Ensure that the pump is relieved of line pressure.
2. Wear suitable protective clothing and eye shielding for protection.
3. Flush process fluid on the pump with suitable neutralizing agent.
4. Disconnect and lockout electrical power to the pump.
5. Isolate and disconnect the piping on the suction and discharge valves.
6. Remove the valves using a wrench and rotate CCW for the discharge valve and CW for the suction valve.
7. Before installing the new check valves clean the threads on the diaphragm head off any debris or excess sealing compounds.
8. Use thread sealant sparingly. DO NOT APPLY sealant inside the check valves as this could clog and impede in the operation of the check ball.
9. Install the new check valve and tighten accordingly.
10. Reinstall the piping and follow startup procedure.

For AquFlow pumps with serviceable type check valves (1/2" and 7/8" ball size check) the valves assemblies consist of male, and female valve body, o-ring, three pieces of ball guides and ball. These check valve assemblies are designed to be self cleaning and should seldom need replacement or servicing.

Note

Always wear protective clothing and eye shielding for protection and lockout electrical power to the pump.

Flush out process fluid from the pump and disconnect the piping to the suction and discharge of the pump




Please visit www.aquflowpumps.com/videos to view a full check valve seat replacement.

9.5 Diaphragm and o-ring replacement


Except in the unlikely event of a loss in integrity, the diaphragm does not require replacement. Should a diaphragm replacement be required, the following steps must be followed:

DISASSEMBLY

1. Wear suitable protective clothing and eye shielding for protection.
2. Disconnect and lockout electrical power to the pump and drain the oil. See picture for location of the drain plug.

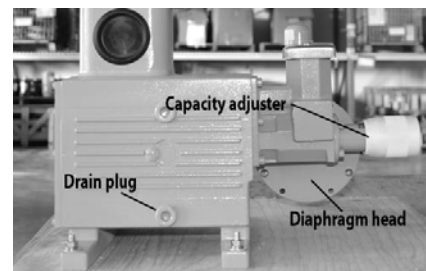

3. Disconnect and isolate all piping on the suction and discharge check valves of the pump.
4. Drain oil from the pump.
5. Remove the 6 screws (7018) from the diaphragm head, then carefully remove the diaphragm head (7016) from the pressure chamber assembly (4631).
6. In most cases, the PTFE diaphragm (7014) will need to be gently pried off the diaphragm head (7016). Careful not to scratch the diaphragm heads mating surface as this could cause liquid to leak during pump operation.
7. Remove the contour plate (7021) from the diaphragm head. Clean and inspect prior to reassembly or replace if necessary. The contoured surface should be clean and smooth and free of any debris to prevent the diaphragm from being punctured in operation.
8. Remove the diaphragm o-ring (7017) from the support plate (7002), and the three Philips head screws (7008) securing the support plate (7002). Clean and inspect for damaged. Replace if necessary. The contoured surface should be clean and smooth and free of any debris to prevent the diaphragm from being punctured in operation.
9. Remove the four screws (7006) and remove the back plate (7001) from the pressure chamber (4631). Remove and discard the o-ring (7004).

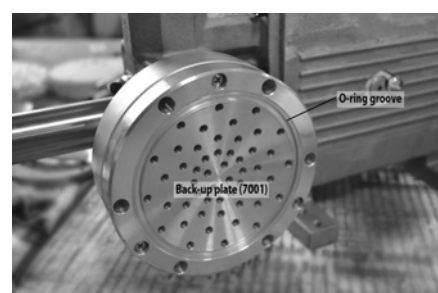

Note

To prevent leakage, never attempt to reuse the old diaphragm.

REASSEMBLY

Make sure you have the new diaphragm and new o-ring appropriate for the pump size you are working on.

1. Place the new o-ring (7004) on the pressure chamber groove. Put a small amount of general purpose grease to keep this in place on the groove.
2. Install the back plate (7001) on the pressure chamber and secure with four screws (7004). Tighten to final torque of 15 ft. Lbs.
3. On the groove of the back plate (7001), put a small amount of general purpose grease before installing the new support plate o-ring (7020). This will keep the o-ring on the groove temporarily while aligning the support plate holes to the back plate.
4. Install the support plate (7002) over the o-ring (7020) - contoured surface facing out - on the back plate and secure with three Philips head screws (7006).
5. Put a small amount of general purpose grease on the groove of the support plate (7002) and put the diaphragm o-ring (7017) on the groove of the support plate.
6. Place the PTFE diaphragm (7014) centered over the o-ring then gently press the center of the diaphragm to create a vacuum in the hydraulic chamber.
7. Place the contour plate (7021) inside the diaphragm head with contoured surface facing the PTFE diaphragm. Align the holes and secure the with six diaphragm head screws.
8. Tighten the diaphragm screws in steps diagonal pattern to a final torque of 30 – 40 ft. lbs of torque.
9. Refill the pump with oil and follow the start up procedure.




Please visit www.aquflowpumps.com/videos to view a demonstration of a diaphragm replacement.

9.6 Adjusting internal relief valve

The internal relief valve is factory set to open at a pressure slightly higher than the discharge pressure indicated on the pump data plate. Unless otherwise indicated, when the pump is ordered the internal relief valve is set to open at the greater of 25 psig or 25% above the discharge pressure.

1. Wear suitable protective clothing and eye protection.
2. Install a pressure gauge in the discharge line of the metering pump with a range 50% greater than the desired internal relief valve setting.
3. Install an adjustable safety relief valve downstream from the pressure gauge.
4. Remove the oil reservoir cap assembly. The brass internal relief adjuster is located on a cast-in boss just under the cover. The adjuster requires a 5/16" hexagonal type "Allen" wrench.

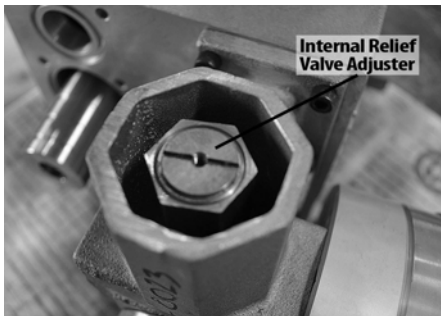

5. Set the capacity adjuster to 100%, back off the adjustment to the safety relief valve so it opens at zero psig and start the pump. Continue to run the pump long enough to establish good pumping action.

6. Increase the seating of the SRV until the pump starts to build pressure. Carefully and continually observe the pressure indicated on the gauge. Gradually increase the safety relief valve setting until the pump internal relief valve actuates.
7. Rotate the internal relief valve adjuster CCW to decrease the pressure and CW to increase the pressure. Adjustments should be made in 1/4 turn increments. After each adjustment, relieve the discharge pressure by opening the safety relief valve. Observe the pressure gauge and repeat the adjustment as described until the desired internal relief valve pressure is indicated on the pressure gauge.
8. After adjustments are complete, return the safety relief valve to its appropriate setting.
9. Return pump to service.



Please visit www.aquflowpumps.com/videos to view a demonstration of an internal relief valve adjustment.

Do not run pump with relief valve adjuster "bottomed out," as severe damage to pump may result!




Never exceed pressure rating of pump or any component of the system or piping! When the relief valve is actuated, particularly in the larger plunger size or high-speed units, oil may be ejected at high velocity through the bypass port. Routine precautions should be taken to prevent oil from splashing the operator of the surrounding area!

9.7 Replacing gear shaft o-rings




1. Disconnect and lockout electrical power to the pump (Note: If this procedure is done carefully, it may not be necessary to drain hydraulic oil).
2. Remove the (2) gearshaft screws from the housing - one on each side of the housing.
3. Slide gear shaft approximately 1/2" in either direction; DO NOT REMOVE IT FULLY.
4. Remove and replace exposed o-ring.
5. Apply a thin film of oil to the o-ring and slide gear shaft back into housing. Replace opposite side o-ring using the same procedure.
6. Slide gear shaft to its original position and reinstall (2) retaining screws, using Loctite® or equal.
7. Recheck the hydraulic oil level and add oil as necessary.
8. Restart pump.

Drive Unit: Parts List & Cross Section (Simplex & Duplex)

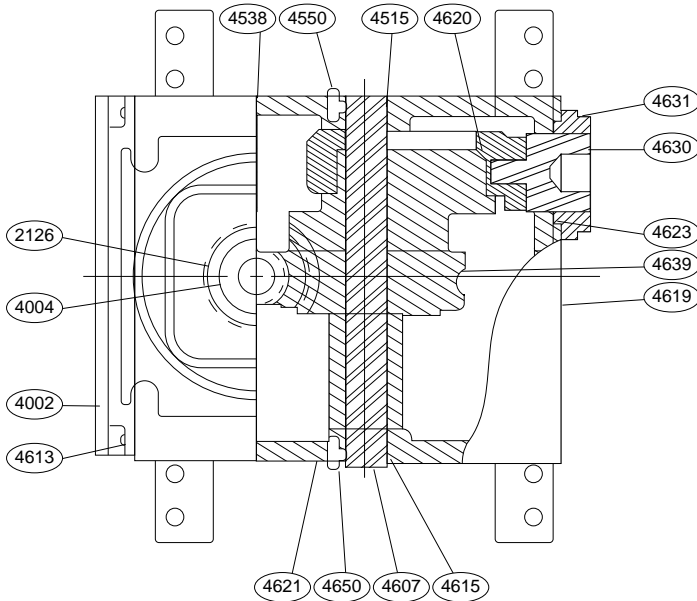

SIMPLEX

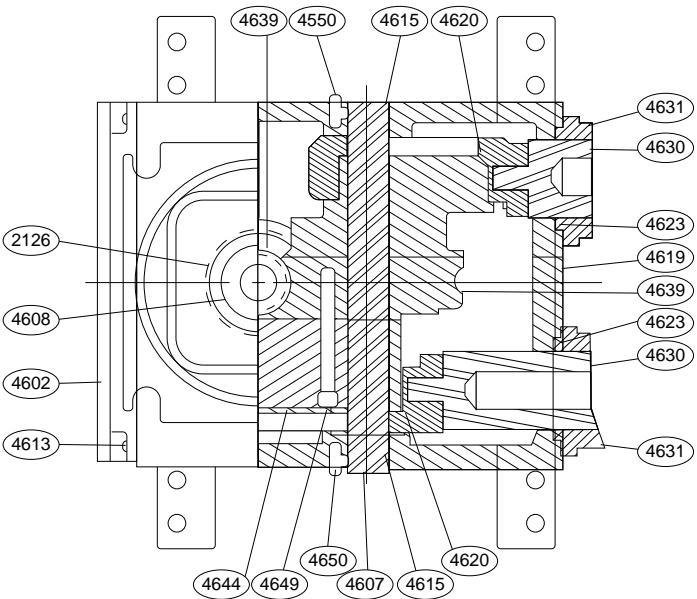

DUPLEX

NOTES:

① 3 QUARTS REQUIRED

PUMP MODEL AND SERIAL NUMBER ARE REQUIRED BY FACTORY WHEN ORDERING PARTS!

INFORMATION SUBJECT TO CHANGE WITHOUT NOTICE.

| ITEM | QTY | DESCRIPTION |
|------|-----|--------------------------------|
| 2123 | 1 | COVER, SNAP |
| 2126 | 1 | BEARING, RETAINER |
| 4602 | 1 | COVER, REAR |
| 4603 | 1 | SILICONE, SEALANT |
| 4605 | 2 | BEARING, ROLLER |
| 4606 | 1 | OIL SEAL |
| 4607 | 1 | SHAFT, GEAR |
| 4608 | 1 | COUPLING SET |
| 4611 | 4 | BOLT, MOTOR |
| 4613 | 8 | SCREW, REAR COVER |
| 4614 | ① | HYDRAULIC OIL |
| 4615 | 2 | O-RING, GEARSHAFT |
| 4616 | 2 | PIPE PLUG |
| 4617 | 1 | KEY |
| 4618 | 1 | COVER, PRESSURE CHAMBER |
| 4619 | 1 | HOUSING |
| 4620 | 1 | BEARING, CROSSHEAD |
| 4621 | 1 | SPACER |
| 4622 | 1 | O-RING, UPPER PRESSURE CHAMBER |
| 4623 | 1 | O-RING, LOWER PRESSURE CHAMBER |
| 4624 | 1 | MICROMETER KNOB |
| 4625 | 1 | CAPACITY PLATE |
| 4626 | 4 | BOLT, PRESSURE CHAMBER |
| 4627 | 4 | BOLT, ADJUSTER HOUSING |
| 4628 | 1 | BASE |
| 4629 | 4 | BOLT, BASE |
| 4630 | 1 | PLUNGER/CROSSHEAD ASSEMBLY |
| 4631 | 1 | PRESSURE CHAMBER |
| 4632 | 1 | ADJUSTER HOUSING |
| 4633 | 1 | ADJUSTER |
| 4634 | 1 | RELIEF VALVE ASSEMBLY |
| 4635 | 1 | O-RING, ADJUSTER HOUSING |
| 4636 | 1 | O-RING, ADJUSTER |
| 4637 | 1 | JAM NUT |
| 4638 | 1 | WORM SHAFT |
| 4639 | 1 | GEAR |
| 4640 | 1 | MOTOR |
| 4642 | 2 | LOCKING PLUNGER |
| 4643 | 1 | SPRING, LOCKING PLUNGER |
| 4644 | 1 | ECCENTRIC |
| 4645 | 1 | O-RING, PRESSURE CHAMBER |
| 4646 | 1 | WASHER, NYLON |
| 4647 | 1 | SCREW, PRESSURE CHAMBER |
| 4649 | 3 | BOLT, ECCENTRIC |
| 4650 | 2 | SCREW, GEAR SHAFT |
| 4651 | 4 | WASHER, MOTOR |
| 4652 | 4 | NUT, BASE |
| 4653 | 4 | LOCKWASHER, BASE |

Drive Unit: Parts List & Cross Section (End View & Side View)

| ITEM | QTY | DESCRIPTION |
|-------|-----|--------------------------------|
| 2123 | 1 | COVER, SNAP |
| 2126 | 1 | BEARING, RETAINER |
| 4602 | 1 | COVER, REAR |
| 4603 | 1 | SILICONE, SEALANT |
| 4605 | 2 | BEARING, ROLLER |
| 4606 | 1 | OIL SEAL |
| 4607 | 1 | SHAFT, GEAR |
| 4608 | 1 | COUPLING SET |
| 4611 | 4 | BOLT, MOTOR |
| 4613 | 8 | SCREW, REAR COVER |
| 4614* | ① | HYDRAULIC OIL |
| 4615 | 2 | O-RING, GEARSHAFT |
| 4616 | 2 | PIPE PLUG |
| 4617 | 1 | KEY |
| 4618 | 1 | COVER, PRESSURE CHAMBER |
| 4619 | 1 | HOUSING |
| 4620 | 1 | BEARING, CROSSHEAD |
| 4621 | 1 | SPACER |
| 4622 | 1 | O-RING, UPPER PRESSURE CHAMBER |
| 4623 | 1 | O-RING, LOWER PRESSURE CHAMBER |
| 4624 | 1 | MICROMETER KNOB |
| 4625 | 1 | CAPACITY PLATE |
| 4626 | 4 | BOLT, PRESSURE CHAMBER |
| 4627 | 4 | BOLT, ADJUSTER HOUSING |
| 4628 | ① | BASE (NOT SHOWN) |
| 4629 | 4 | BOLT, BASE |
| 4630 | 1 | PLUNGER/CROSSHEAD ASSEMBLY |
| 4631 | 1 | PRESSURE CHAMBER |
| 4632 | 1 | ADJUSTER HOUSING |
| 4633 | 1 | ADJUSTER |
| 4634 | 1 | RELIEF VALVE ASSEMBLY |
| 4635 | 1 | O-RING, ADJUSTER HOUSING |
| 4636* | 1 | O-RING, ADJUSTER |
| 4637 | 1 | JAM NUT |
| 4638 | ① | WORM SHAFT |
| 4639 | ① | GEAR |
| 4640 | 1 | MOTOR |
| 4642 | 2 | LOCKING PLUNGER |
| 4643 | 1 | SPRING, LOCKING PLUNGER |
| 4644 | 1 | ECCENTRIC |
| 4645 | 1 | O-RING, PRESSURE CHAMBER |
| 4646 | 1 | WASHER, NYLON |
| 4647 | 1 | SCREW, PRESSURE CHAMBER |
| 4649 | 3 | BOLT, ECCENTRIC |
| 4650 | 2 | SCREW, GEAR SHAFT |
| 4651 | 4 | WASHER, MOTOR |
| 4652 | 4 | NUT, BASE |
| 4653 | 4 | LOCKWASHER, BASE |

NOTES:

* DENOTES RECOMMENDED SPARE PARTS


① 3 QUARTS REQUIRED

① BASE NOT REQUIRED ON ALL MODELS


① MANUFACTURER RECOMMENDS THAT WORM AND GEAR BE REPLACED AS SET.

PUMP MODEL AND SERIAL NUMBER ARE REQUIRED BY FACTORY WHEN ORDERING PARTS!

INFORMATION SUBJECT TO CHANGE WITHOUT NOTICE.


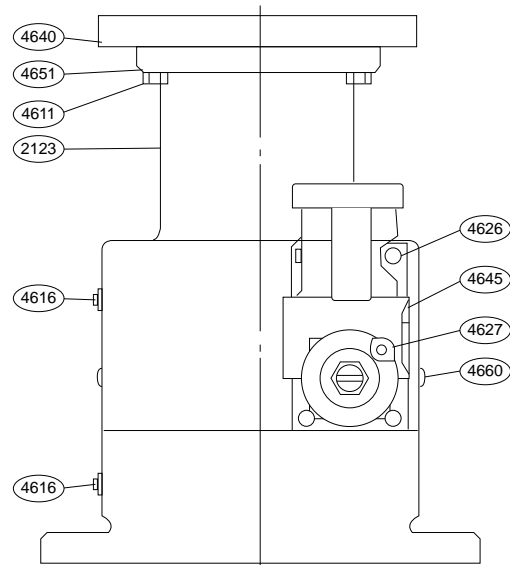


END VIEW
(looking at micrometer knob)

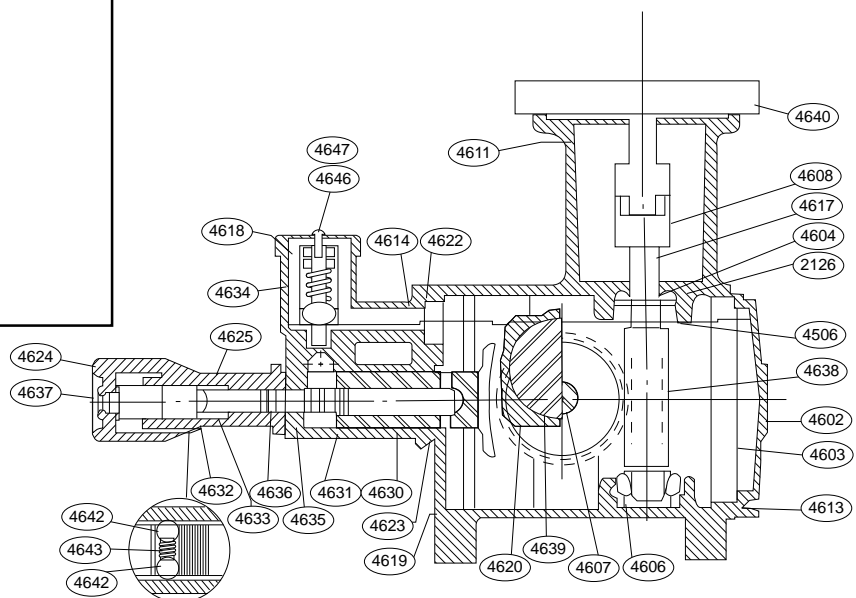


SIDE VIEW

Drive Unit: Parts List & Cross Section (Series CD05, CD06, CD10 & CD12²)

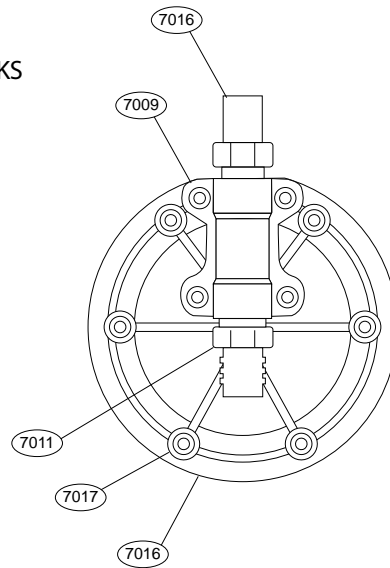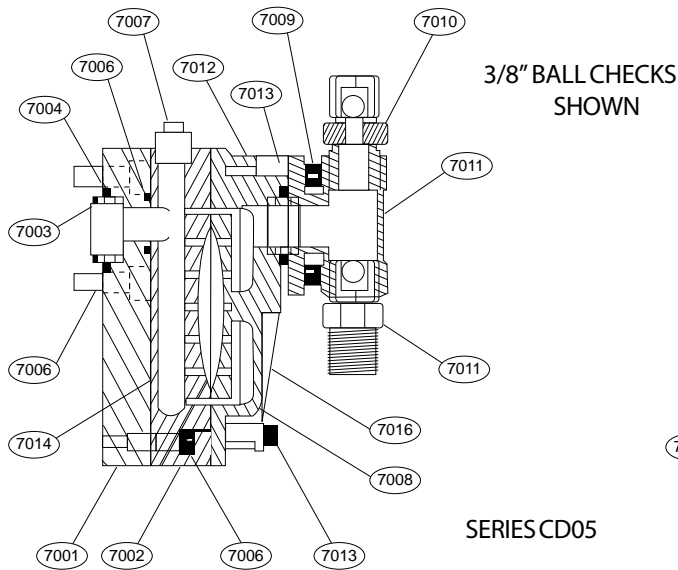

SERIES CD06, CD10 & CD12

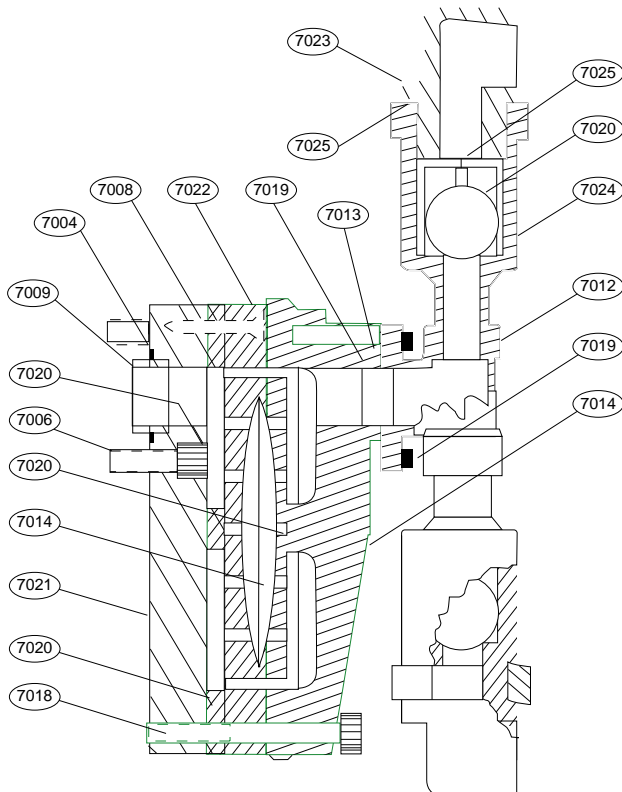


| ITEM | DESCRIPTION |
|--------------------|--|
| 7001 | BACK PLATE |
| 7002 | SUPPORT PLATE |
| 7003 | TRANSITION NIPPLE, OBSOLETE |
| 7004 | O-RING, NIPPLE, OBSOLETE |
| 7005 | O-RING, BACK PLATE |
| 7006 | BOLT, TRANSITION |
| 7007 | PLUG, OBSOLETE |
| 7008 | BOLT, SUPPORT PLATE |
| 7010 | CHECK VALVE, CARTRIDGE ASSEMBLY, DISCHARGE |
| 7011 | CHECK VALVE, CARTRIDGE ASSEMBLY, SUCTION |
| 7012 | TEE |
| 7013* | O-RING, TEE |
| 7014* | DIAPHRAGM |
| 7016 | DIAPHRAGM HEAD |
| 7017 | BOLT, DIAPHRAGM HEAD |
| 7018 | BOLT, DIAPHRAGM HEAD |
| 7019 | TEENIPPLE |
| 7020 | SEALANT |
| 7021 | DIAPHRAGM, SUPPORT PLATE |
| 7023 ¹ | VALVE BODY, FEMALE |
| 7024 ¹ | VALVE BODY, MALE |
| 7025 ^{1*} | O-RING, VALVE |
| 7026 ¹ | BALL GUIDE SET |
| 7027 ¹ | BALL, VALVE |

¹ REPAIRABLE CHECK VALVES. (1/2" & 7/8" ONLY) ITEM NOS. 7023-7027 MAY BE INCLUDED WITH SERIES CD05 & CD06 IN PLACE OF CHECK VALVE ASSEMBLIES, ITEM NOS. 7010 & 7011.

* DENOTES RECOMMENDED SPARE PARTS.

PUMP SERIAL & MODEL NUMBER REQUIRED TO ACCURATELY SPECIFY PARTS WHICH VARY BY SIZE.

Sub-Assembly & Parts List

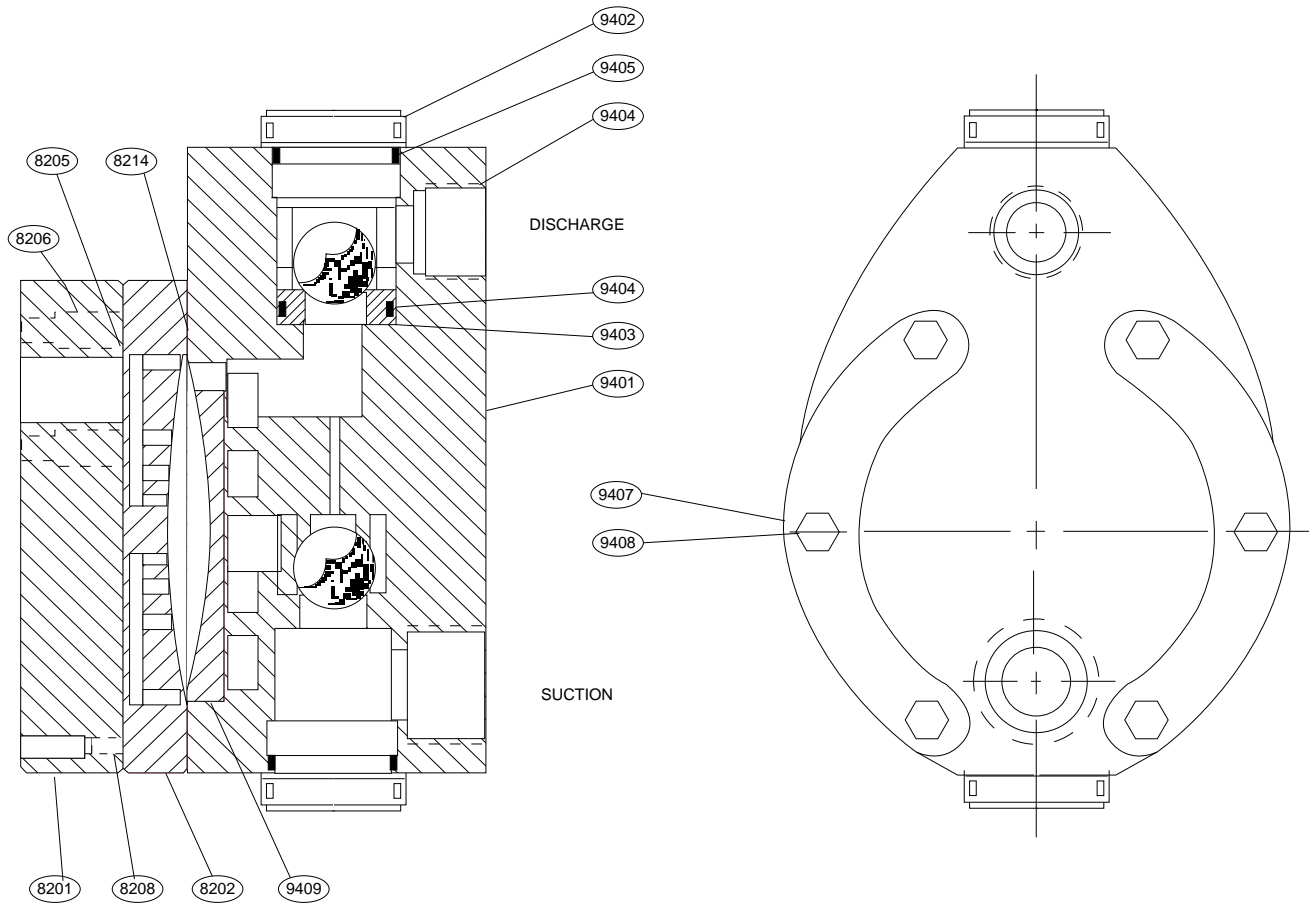


INFORMATION SUBJECT TO CHANGE WITHOUT NOTICE

| ITEM | QTY | DESCRIPTION |
|------|-----|----------------------|
| 8201 | 1 | BACK PLATE |
| 8202 | 1 | SUPPORT PLATE |
| 8205 | 1 | O-RING, BACK PLATE |
| 8208 | 3 | SCREW, SUPPORT PLATE |
| 8214 | 1 | DIAPHRAGM |
| 9401 | 1 | DIAPHRAGM HEAD |
| 9402 | 2 | CAP, VALVE |
| 9403 | 2 | SEAT, VALVE |
| 9404 | 2 | BALL, VALVE |
| 9405 | 2 | O-RING, CAP |
| 9406 | 2 | O-RING, SEAT |
| 9407 | 2 | BOLTING PLATE |
| 9408 | 6 | BOLT, DIAPHRAGM HEAD |
| 9409 | 1 | CONTOUR PLATE |
| 8206 | 4 | SCREW, BACK PLATE |

Additional Drawings & Diagrams

PLASTIC LIQUID END - HI SUCTION LIFT

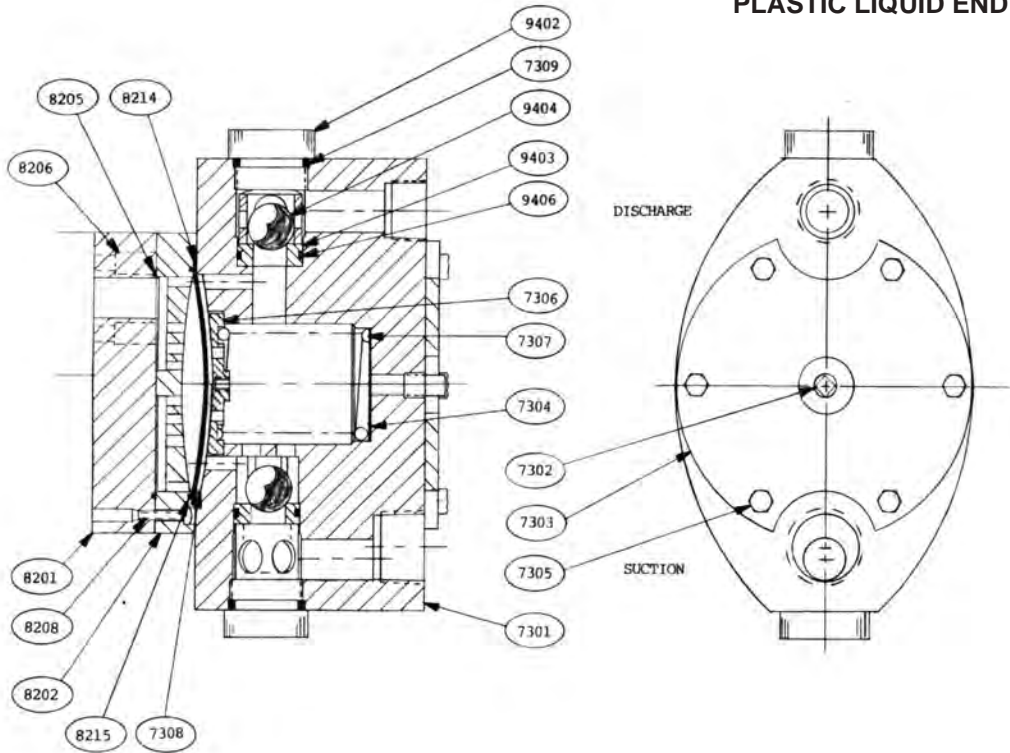


| ITEM | QTY | DESCRIPTION |
|------|-----|-----------------------|
| 7301 | 1 | DIAPHRAGM HEAD |
| 7302 | 1 | PIPE PLUG |
| 7303 | 1 | PLATE, DIAPHRAGM HEAD |
| 7305 | 6 | BOLT, DIAPHRAGM HEAD |
| 7306 | 1 | SPRING SEAT |
| 7307 | 1 | SPRING |
| 7308 | 1 | PAD, SPRING SEAT |
| 7309 | 2 | O-RING, VALVE CAP |
| 8201 | 1 | BACK PLATE |
| 8202 | 1 | SUPPORT PLATE |
| 8205 | 1 | O-RING, BACK PLATE |
| 8206 | 4 | SCREW, BACK PLATE |
| 8208 | 3 | SCREW, SUPPORT PLATE |
| 8214 | 1 | DIAPHRAGM |
| 8215 | 1 | O-RING, DIAPHRAGM |
| 9402 | 2 | CAP, VALVE |
| 9403 | 2 | SEAT, VALVE |
| 9404 | 2 | BALL, VALVE |
| 9406 | 2 | O-RING, SEAT |
| 7304 | 1 | WASHER, SPRING |


LIQUID END - 1-1/4", 1-3/8", 1-1/2" PLUNGER SIZE

| ITEM | QTY | DESCRIPTION |
|-------|-----|-----------------------|
| 0600 | 1 | DIAPHRAGM |
| *0602 | 1 | DIAPHRAGM HEAD |
| 0603 | 1 | BACK-UP PLATE |
| *0604 | 1 | CONTOUR PLATE |
| 0605 | 4 | SCREW, SUPPORT PLATE |
| 0606 | 8 | SCREW, DIAPHRAGM HEAD |
| *0607 | 2 | VALVE BODY, FEMALE |
| *0608 | 2 | VALVE BODY, MALE |
| *0609 | 2 | O-RING, VALVE BODY |
| *0610 | 2 | BALL GUIDES |
| *0611 | 2 | BALL |
| 1414 | 1 | SUPPORT PLATE |

NOTE: * = MATERIAL VARIABLE

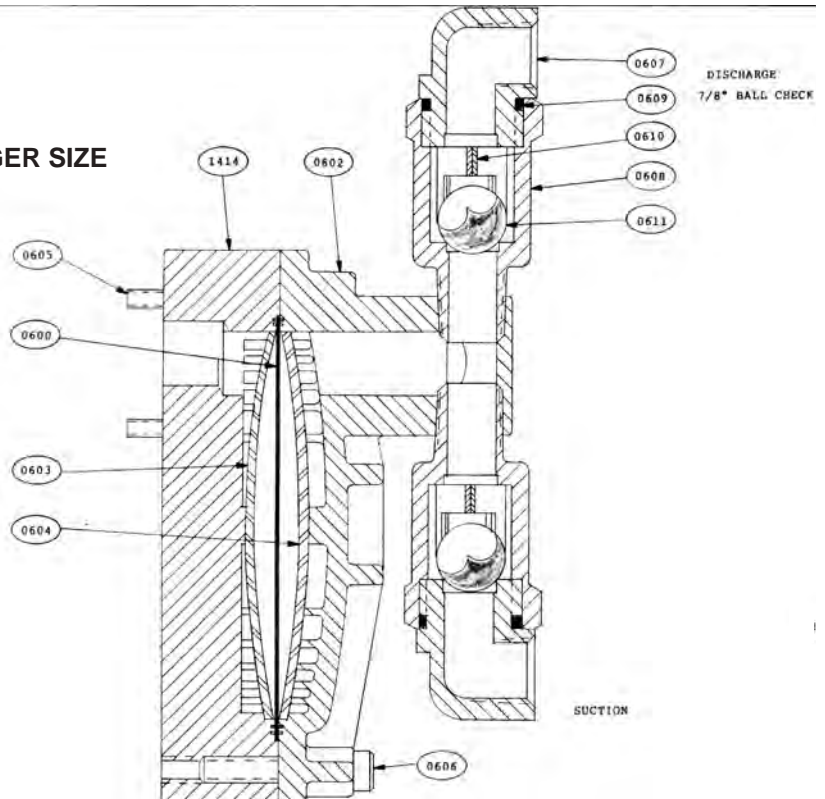

DISC DIAPHRAGM LIQUID END - 5/8", 3/4" PLGR SIZE

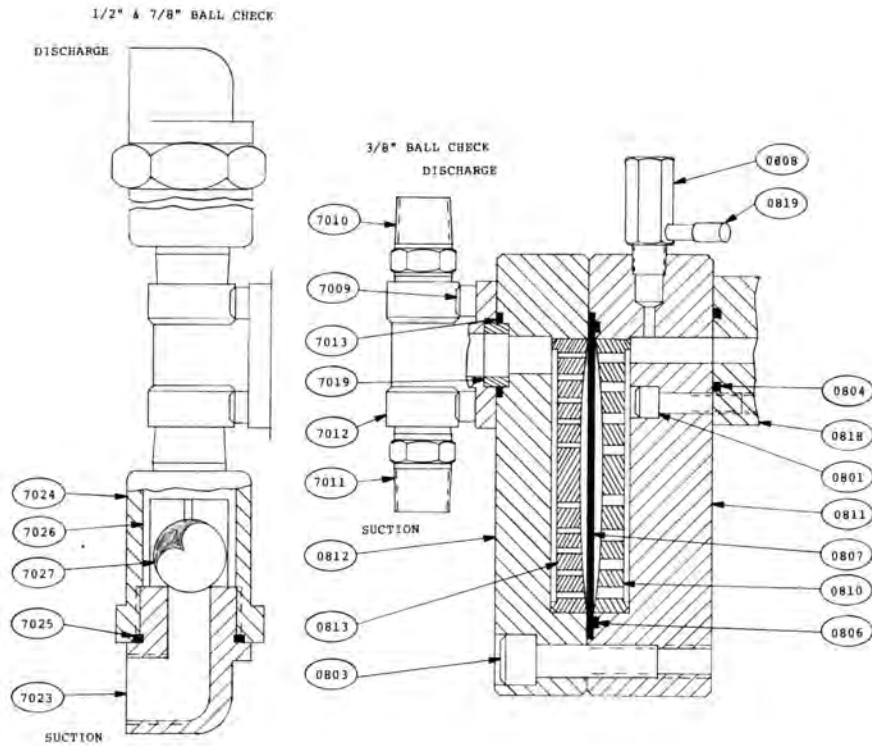


| ITEM | QTY | DESCRIPTION |
|-------|-----|--------------------------------|
| 0801 | 4 | SCREW, MOUNTING PLATE |
| 0803 | 6 | SCREW, DIAPHRAGM HEAD |
| 0804 | 1 | O-RING, PRESSURE CHAMBER |
| 0806 | 1 | O-RING, MOUNTING PLATE |
| 0807 | 1 | DIAPHRAGM |
| 0808 | 1 | SNIFTER |
| 0810 | 1 | BACK-UP PLATE |
| 0811 | 1 | MOUNTING PLATE |
| *0812 | 1 | DIAPHRAGM HEAD |
| *0813 | 1 | CONTOUR PLATE |
| 0818 | 1 | PRESSURE CHAMBER |
| 0819 | 1 | TUBING/FITTINGS, SNIFTER |
| 7009 | 4 | SCREW, TEE |
| *7010 | 1 | DISCHARGE CHECK VALVE ASSEMBLY |
| *7011 | 1 | SUCTION CHECK VALVE ASSEMBLY |
| *7012 | 1 | TEE |
| 7013 | 1 | O-RING, TEE |
| *7019 | 1 | TEE NIPPLE |
| *7023 | 2 | VALVE BODY, FEMALE |
| *7024 | 2 | VALVE BODY, MALE |
| *7025 | 2 | O-RING, VALVE BODY |
| *7026 | 2 | BALL GUIDES |
| *7027 | 2 | BALL |

NOTE: * = MATERIAL VARIABLE

DISC DIAPHRAGM LIQUID END W/ INTEGRAL TEE - 3/4", 1-1/2" PLGR SIZE



| ITEM | QTY | DESCRIPTION |
|------|-----|--------------------------------|
| 1406 | 1 | DIAPHRAGM HEAD |
| 1407 | 6 | SCREW, DIAPHRAGM HEAD |
| 1408 | 1 | CONTOUR PLATE |
| 1409 | 1 | DIAPHRAGM |
| 1410 | 1 | SUPPORT PLATE |
| 1411 | 1 | O-RING, BACK PLATE |
| 1412 | 3 | SCREW, RETAINING |
| 1413 | 1 | BACK PLATE |
| 7006 | 4 | SCREW, BACK PLATE |
| 7010 | 1 | DISCHARGE CHECK VALVE ASSEMBLY |
| 7011 | 1 | SUCTION CHECK VALVE ASSEMBLY |
| 7023 | 2 | VALVE BODY, FEMALE |
| 7024 | 2 | VALVE BODY, MALE |
| 7025 | 2 | O-RING, VALVE BODY |
| 7026 | 2 | BALL GUIDE |
| 7027 | 2 | BALL |
| 8215 | 1 | O-RING, DIAPHRAGM |

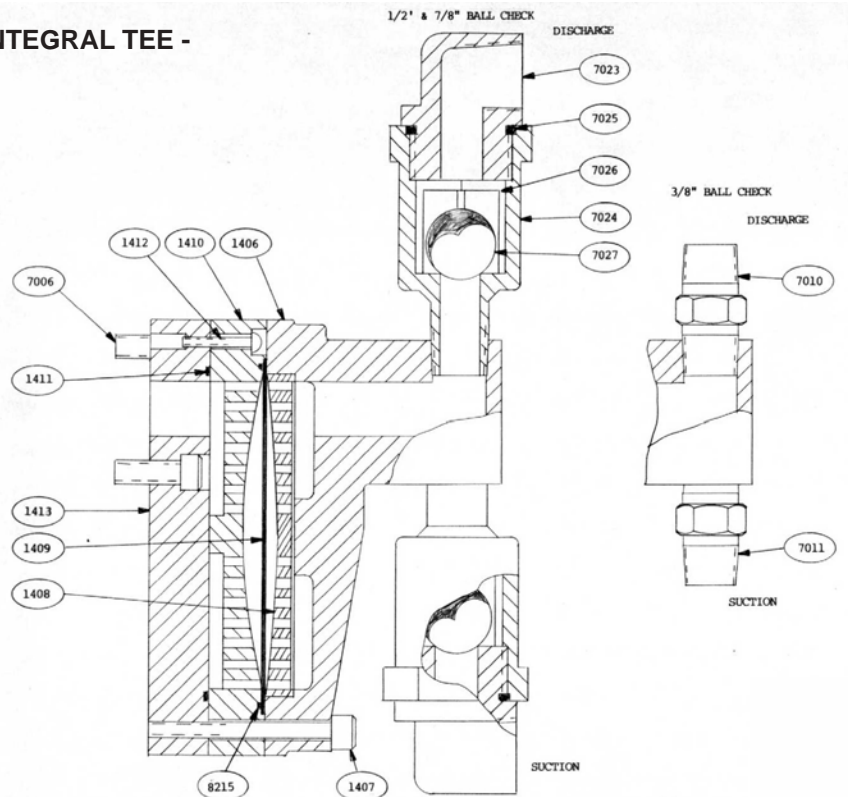

**LIQUID END W/ VACUUM RUPTURE -
1-1/4", 1-3/8", 1-1/2" PLUNGER SIZE**


| ITEM | QTY | DESCRIPTION |
|-------|-----|-----------------------|
| *0602 | 1 | DIAPHRAGM HEAD |
| 0603 | 1 | BACK-UP PLATE |
| *0604 | 1 | CONTOUR PLATE |
| 0605 | 4 | SCREW, SUPPORT PLATE |
| 0606 | 8 | SCREW, DIAPHRAGM HEAD |
| *0607 | 2 | VALVE BODY, FEMALE |
| *0608 | 2 | VALVE BODY, MALE |
| *0609 | 2 | O-RING, VALVE BODY |
| *0610 | 2 | BALL GUIDES |
| *0611 | 2 | BALL |
| 1414 | 1 | SUPPORT PLATE |
| 1415 | 2 | DIAPHRAGM |
| 1416 | 1 | DIAPHRAGM RETAINER |

NOTE: * = MATERIAL VARIABLE

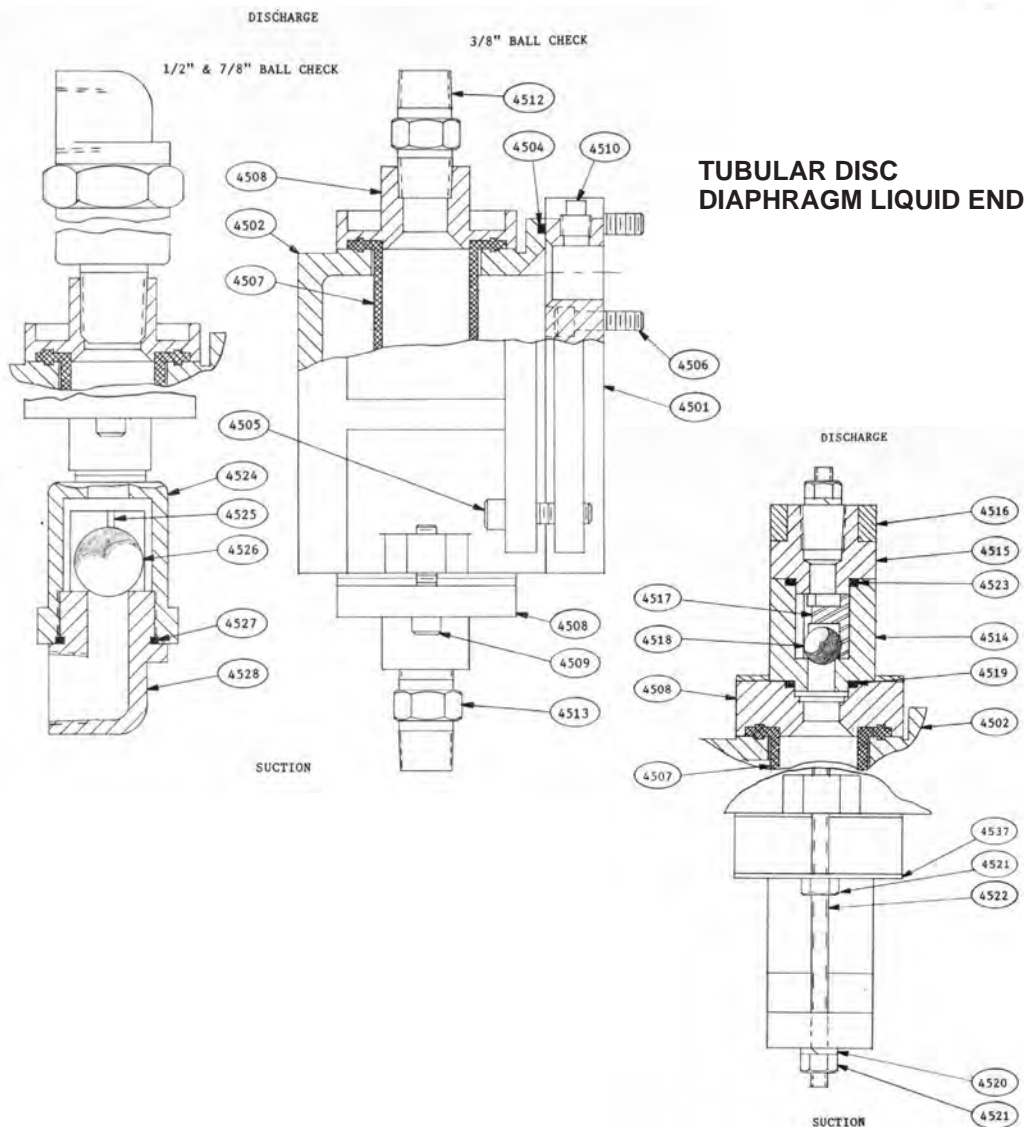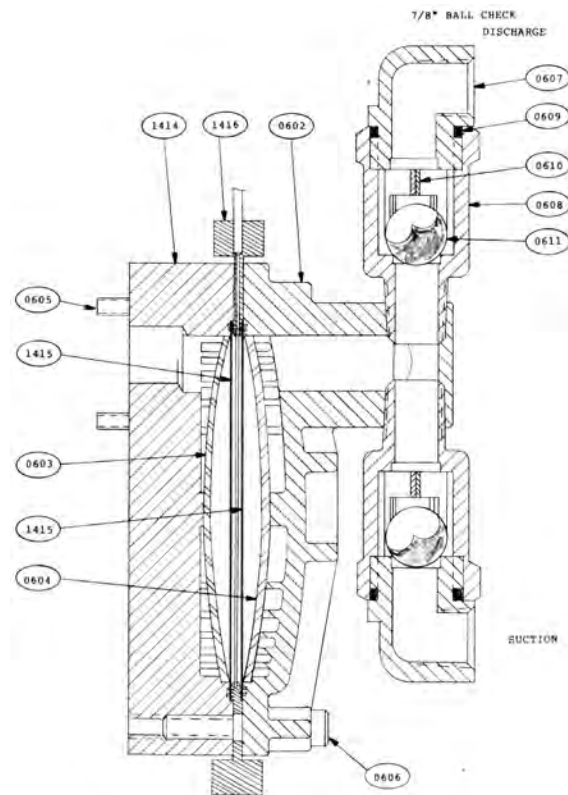

| ITEM | QTY | DESCRIPTION |
|-------|-----|-----------------------|
| 4501 | 1 | BACK PLATE |
| 4502 | 1 | HOUSING |
| 4504 | 1 | O-RING, HOUSING |
| 4505 | 4 | SCREW, HOUSING |
| *4506 | 4 | SCREW, BACK PLATE |
| *4507 | 1 | DIAPHRAGM |
| *4508 | 2 | FLANGE |
| 4509 | 4 | SCREW, FLANGE |
| 4510 | 1 | PIPE PLUG |
| *4512 | 1 | DISCHARGE CHECK VALVE |
| *4513 | 1 | SUCTION CHECK VALVE |
| *4514 | 2 | SEAT |
| *4515 | 2 | CONNECTOR |
| 4516 | 2 | YOKE |
| *4517 | 2 | BALL GUID |
| *4518 | 2 | BALL |
| *4519 | 2 | O-RING, SEAT |
| 4520 | 4 | LOCKWASHER |
| 4521 | 8 | NUT |
| 4522 | 4 | STUD |
| *4523 | 2 | O-RING, CONNECTOR |
| *4524 | 2 | VALVE BODY, MALE |
| *4525 | 2 | BALL GUIDES |
| *4526 | 2 | BALL |
| *4527 | 2 | O-RING, VALVE BODY |
| *4528 | 2 | VALVE BODY, FEMALE |
| 4537 | 2 | PLATE, FLANGE |

DOUBLE DISC DIAPHRAGM LIQUID END 5/8", 3/4" PLUNGER SIZE

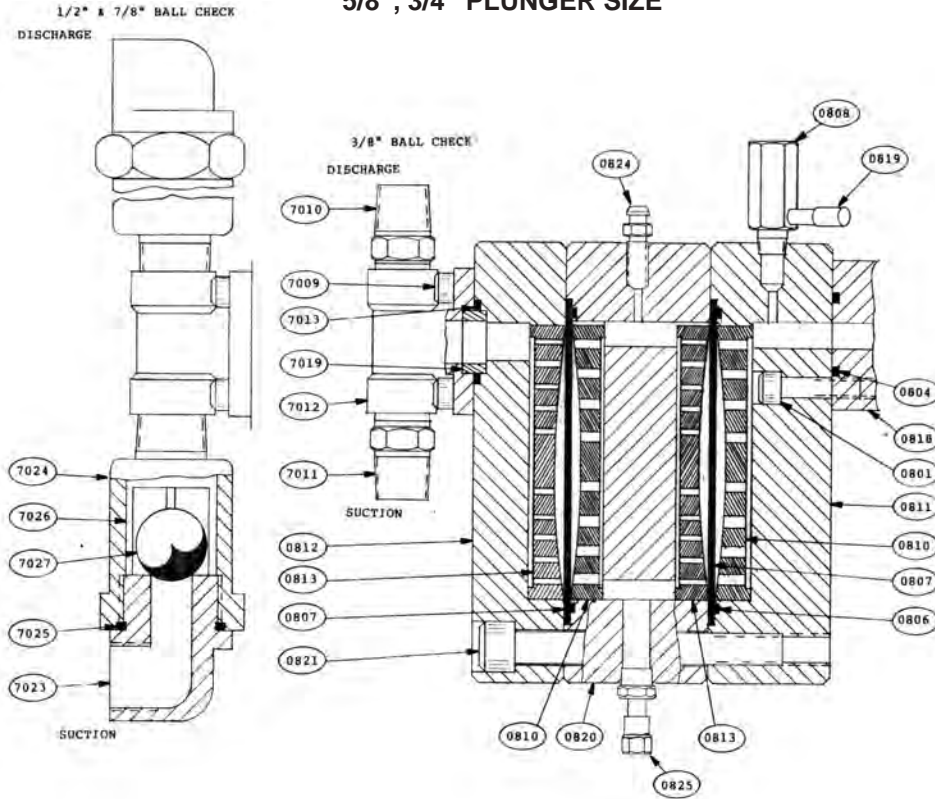


| ITEM | QTY | DESCRIPTION |
|-------|-----|--------------------------------|
| 0801 | 4 | SCREW, MOUNTING PLATE |
| 0804 | 1 | O-RING, PRESSURE CHAMBER |
| 0806 | 2 | O-RING, MOUNTING PLATE |
| 0807 | 2 | DIAPHRAGM |
| 0808 | 1 | SNIFTER |
| 0810 | 2 | BACK-UP PLATE |
| 0811 | 1 | MOUNTING PLATE |
| *0812 | 1 | DIAPHRAGM HEAD |
| *0813 | 2 | CONTOUR PLATE |
| 0818 | REF | PRESSURE CHAMBER |
| 0819 | 1 | TUBING/FITTINGS, SNIFTER |
| 0820 | 1 | INTERMEDIATE CHAMBER |
| 0821 | 6 | SCREW, DIAPHRAGM HEAD |
| 0824 | 1 | BLEED SCREW |
| 7009 | 4 | SCREW, TEE |
| *7010 | 1 | DISCHARGE CHECK VALVE ASSEMBLY |
| *7011 | 1 | SUCTION CHECK VALVE ASSEMBLY |
| *7012 | 1 | TEE |
| 7013 | 1 | O-RING, TEE |
| *7019 | 1 | TEE NIPPLE |
| *7023 | 2 | VALVE BODY, FEMALE |
| *7024 | 2 | VALVE BODY, MALE |
| *7025 | 2 | O-RING, VALVE BODY |
| *7026 | 2 | BALL GUIDES |
| *7027 | 2 | BALL |
| 0823 | 2 | SCREW INTERMEDIATE |
| 0825 | 1 | FILL VALVE |


NOTE: * = MATERIAL VARIABLE

DOUBLE DISC DIAPHRAGM LIQUID END 3/4" - 1-3/8" PLUNGER SIZE


| ITEM | QTY | DESCRIPTION |
|-------|-----|--------------------------------|
| *1406 | 1 | DIAPHRAGM HEAD |
| *1408 | 1 | CONTOUR PLATE |
| 1409 | 2 | DIAPHRAGM |
| 1410 | 1 | SUPPORT PLATE |
| 1411 | 1 | O-RING, BACK PLATE |
| 1412 | 3 | SCREW, RETAINING |
| 1413 | 1 | BACK PLATE |
| 7006 | 4 | SCREW, BACK PLATE |
| 7009 | 4 | SCREW, TEE |
| *7010 | 1 | DISCHARGE CHECK VALVE ASSEMBLY |
| *7011 | 1 | SUCTION CHECK VALVE ASSEMBLY |
| *7012 | 1 | TEE |
| 7013 | 1 | O-RING, TEE |
| *7019 | 1 | TEE, NIPPLE |
| *7023 | 2 | VALVE BODY, FEMALE |
| *7024 | 2 | VALVE BODY, MALE |
| *7025 | 2 | O-RING, VALVE BODY |
| *7026 | 2 | BALL GUIDE |
| *7027 | 2 | BALL |
| 4303 | 1 | INTERMEDIATE PLATE |
| 4316 | 6 | SCREW, DIAPHRAGM HEAD |
| 2912 | 1 | BLEED VALVE |
| 2913 | 1 | SCHRADER VALVE |
| 8215 | 2 | O-RING, DIAPHRAGM |

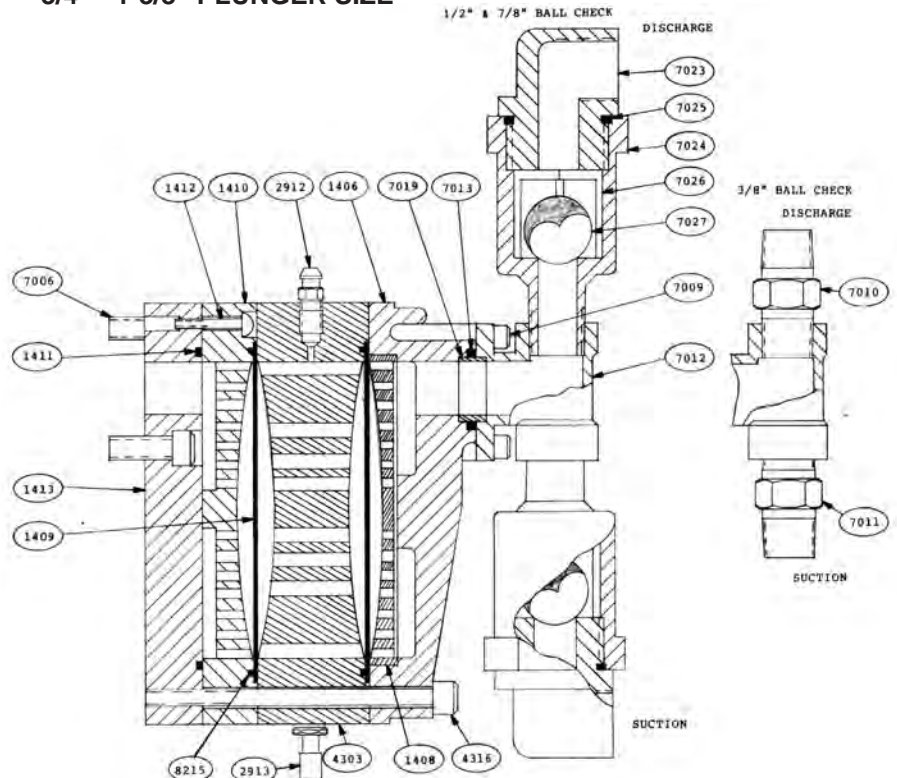



DOUBLE DIAPHRAGM DISC/TUBULAR LIQUID END

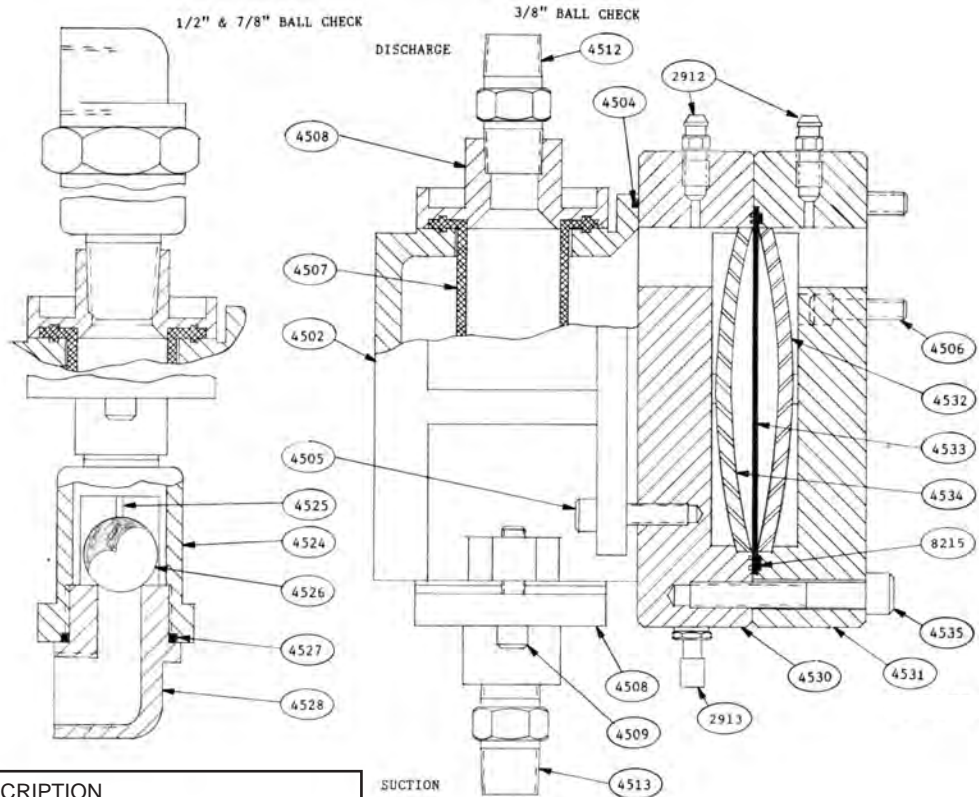

| ITEM | QTY | DESCRIPTION |
|-------|-----|-----------------------|
| 4502 | 1 | HOUSING |
| 4504 | 1 | O-RING, HOUSING |
| 4505 | 4 | SCREW, HOUSING |
| 4506 | 4 | SCREW, BACK PLATE |
| *4507 | 1 | DIAPHRAGM |
| *4508 | 2 | FLANGE |
| 4509 | 4 | SCREW, FLANGE |
| *4512 | 1 | DISCHARGE CHECK VALVE |
| *4513 | 1 | SUCTION CHECK VALVE |
| *4514 | 2 | SEAT |
| *4515 | 2 | CONNECTOR |
| 4516 | 2 | YOKE |
| *4517 | 2 | BALL GUIDE |
| *4518 | 2 | BALL |
| *4519 | 2 | O-RING, SEAT |
| 4520 | 4 | LOCKWASHER |
| 4521 | 8 | NUT |
| 4522 | 4 | STUD |
| *4523 | 2 | O-RING, CONNECTOR |
| *4524 | 2 | VALVE BODY, MALE |
| *4525 | 2 | BALL GUIDE |
| *4526 | 2 | BALL |
| *4527 | 2 | O-RING, VALVE BODY |
| *4528 | 2 | VALVE BODY, FEMALE |
| 4530 | 1 | ADAPTER PLATE |
| 4531 | 1 | MOUNTING PLATE |
| 4532 | 1 | BACK-UP PLATE |
| 4533 | 1 | DIAPHRAGM |
| 4534 | 1 | CONTOUR PLATE |
| 4535 | 6 | SCREW, ADAPTER |
| 2912 | 2 | BLEED VALVE |
| 2913 | 1 | SCHRADER VALVE |
| 8215 | 1 | O-RING, DIAPHRAGM |
| 4537 | 2 | PLATE, FLANGE |

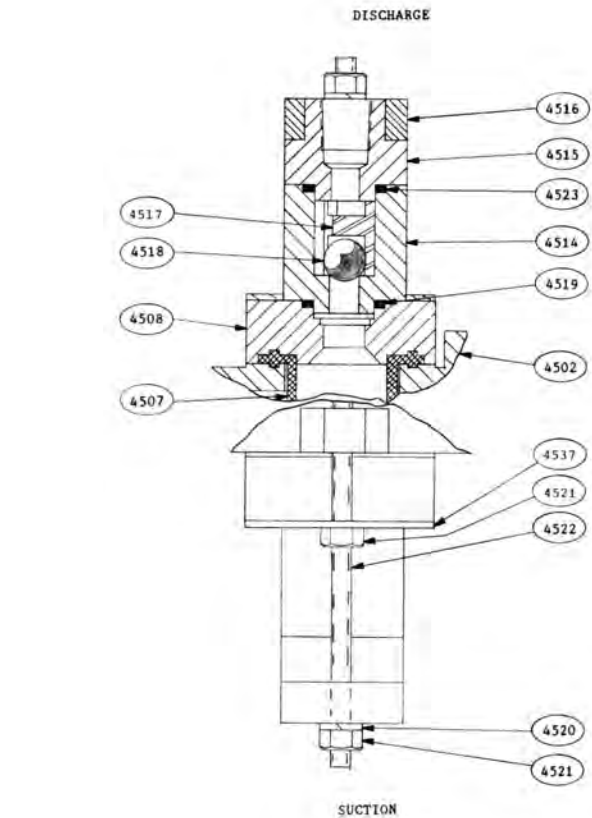

NOTE: * = MATERIAL VARIABLE

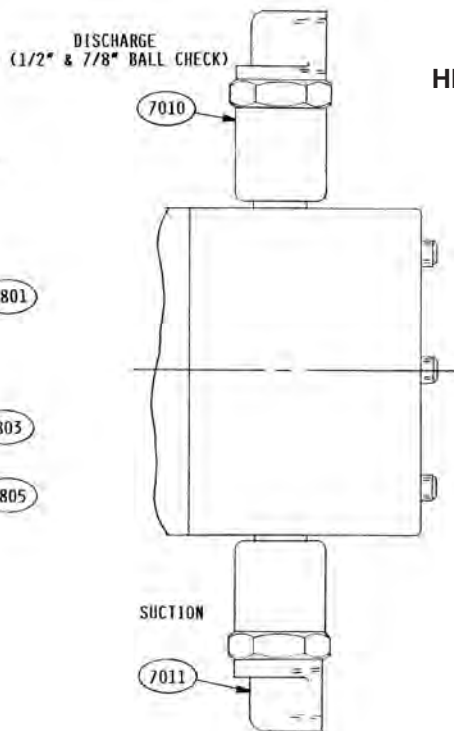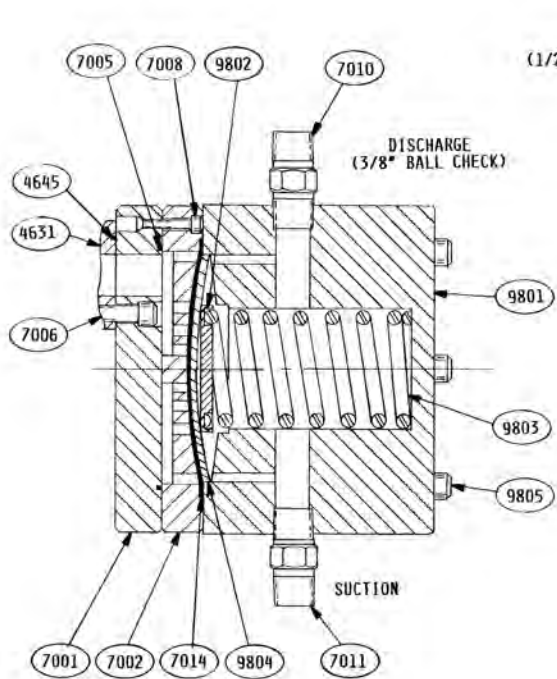


HI SUCTION LIFT LIQUID END

| ITEM | QTY | DESCRIPTION |
|------|-----|--------------------------|
| 9801 | 1 | DIAPHRAGM HEAD |
| 9802 | 1 | SEAT, SPRING |
| 9803 | 1 | SPRING |
| 9804 | 1 | DIAPHRAGM PAD |
| 9805 | 6 | SCREW, DIAPHRAGM HEAD |
| 7001 | 1 | BACK PLATE |
| 7002 | 1 | SUPPORT PLATE |
| 7005 | 1 | O-RING, BACK PLATE |
| 7006 | 4 | SCREW, BACK PLATE |
| 7008 | 3 | SCREW, SUPPORT PLATE |
| 7010 | 1 | DISCHARGE CHECK VALVE |
| 7011 | 1 | SUCTION CHECK VALVE |
| 4631 | REF | PRESSURE CHAMBER |
| 4645 | REF | O-RING, PRESSURE CHAMBER |
| 7014 | 1 | DIAPHRAGM |


REMOTE HEAD LIQUID END 3/4" - 1-1/2" PLGR SIZE

| ITEM | QTY | DESCRIPTION |
|------|-----|--------------------------------|
| 1406 | 1 | DIAPHRAGM HEAD |
| 1407 | 6 | SCREW, DIAPHRAGM HEAD |
| 1408 | 1 | CONTOUR PLATE |
| 1409 | 1 | DIAPHRAGM |
| 1410 | 1 | SUPPORT PLATE |
| 1411 | 1 | O-RING, SUPPORT PLATE |
| 1412 | 3 | SCREW, RETAINING |
| 7009 | 4 | SCREW, TEE |
| 7010 | 1 | DISCHARGE CHECK VALVE ASSEMBLY |
| 7011 | 1 | SUCTION CHECK VALVE ASSEMBLY |
| 7012 | 1 | TEE |
| 7013 | 1 | O-RING, TEE |
| 7019 | 1 | TEE NIPPLE |
| 7050 | 1 | TEE BARSTOCK |
| 7051 | 1 | PIPE PLUG |
| 7052 | 4 | SCREW, BARSTOCK TEE |
| 7053 | 4 | NUT, BARSTOCK TEE |
| 7054 | 1 | BACK PLATE, REMOTE HEAD |

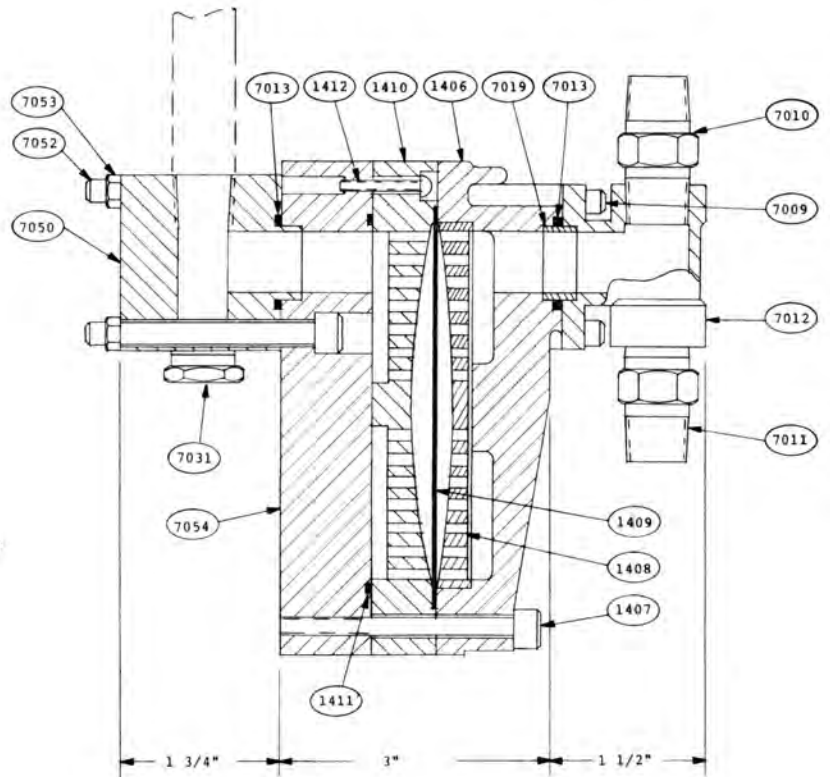

| ITEM | QTY | DESCRIPTION |
|------|------|---------------------------|
| 801 | 4 | BOLT, MOUNTING PLATE |
| 802 | 12 | BOLT, TEE |
| 803 | 6 | BOLT, DIAPHRAGM HEAD |
| 804 | 1 | O-RING, PRESSURE CHAMBER |
| 805 | 3 | O-RING, TEE |
| 806 | 2 | O-RING, MOUNTING PLATE |
| 807 | 2 | DIAPHRAGM |
| 808 | 1 | SNIFTER |
| 809 | A/R | SEALANT |
| 810 | 2* | SUPPORT PLATE |
| 811 | 1* | MOUNTING PLATE |
| 812 | 2* | DIAPHRAGM HEAD |
| 813 | 2* | CONTOUR PLATE |
| 814 | 3* | TEE |
| 815 | 3* | NIPPLE, TEE |
| 816 | 1* | SUCTION CHECK VALVE |
| 817 | 1* | DISCHARGE CHECK VALVE |
| 818 | 1* | PRESSURE CHAMBER |
| 819 | 1 | TUBING/FITTINGS, SNIFTER |
| 820 | 1* | SUPPORT PLATE REMOTE HEAD |
| 821 | 1* | PLUG |
| 822 | 1 | REDUCING BUSHING |
| 823 | 1 | BLEED PLUG |
| 824 | 6* | BOLT, REMOTE HEAD |
| 825 | 6* | NUT, REMOTE HEAD |
| 826 | A/R* | PIPE |

REMOTE LIQUID END - 5/8", 3/4" PLGR SIZE

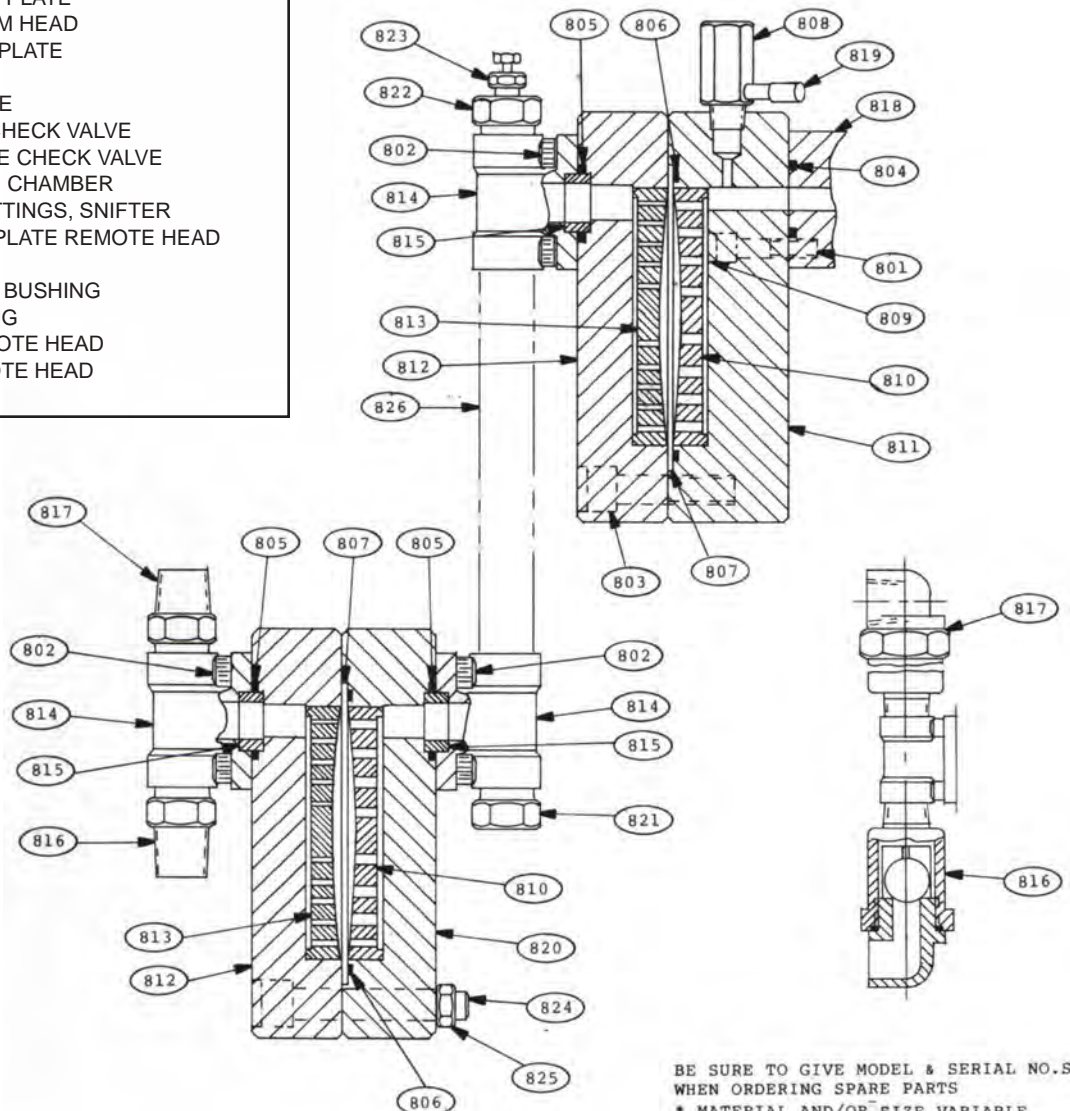

BE SURE TO GIVE MODEL & SERIAL NO.S
WHEN ORDERING SPARE PARTS
* MATERIAL AND/OR SIZE VARIABLE
SEE DATA SHEET 2000.60 OR DRAWING 12048
ITEM 803 TO BE TIGHTEN TO 400 IN/lbs.
ITEMS 824 & 825 TO BE TIGHTEN TO
400 IN/lbs.

Pump Troubleshooting Chart

The following charts cover common problems, probable cause and remedies as related to metering pump operation, and will serve as a basis to help isolate and remedy these problems. Each section lists probable causes and remedies in systematic order of probability.

| | PROBABLE CAUSE | REMEDIES |
|---|---|---|
| Pump fails to deliver rated capacity. | <p>*Please read IMPORTANT NOTE first before proceeding.</p> <ol style="list-style-type: none"> 1. Incorrect capacity setting. 2. Insufficient hydraulic oil. 3. Starved suction. 4. Internal or external relief valve set too low for system conditions. 5. Leaky suction piping. 6. Excessive suction lift. 7. Fluid close to boiling point. 8. Fluid viscosity too high. 9. Worn or dirty ball check valves. | <ol style="list-style-type: none"> 1. Readjust capacity setting. 2. Fill to proper level. 3. Increase suction piping size or increase suction head. 4. Reset valve to correct setting. 5. Repair piping. 6. Decrease lift. 7. Cool liquid; increase suction head. 8. Reduce viscosity of fluid; change ball material; increase ball size. 9. Clean or replace. |
| Pump operates erratically. | <p>*Please read IMPORTANT NOTE first before proceeding.</p> <ol style="list-style-type: none"> 1. Clogged/dirty suction strainer. 2. Insufficient hydraulic oil. 3. Leak in suction piping. 4. Internal external relief valve is relieving 5. Insufficient suction pressure. 6. Worn or dirty ball check valves. 7. Fluid too close to boiling point. 8. Fluid viscosity too high. | <ol style="list-style-type: none"> 1. Clean strainer. 2. Fill to proper level. 3. Repair piping. 4. Reset relief valve. 5. Raise tank fluid level. 6. Clean or replace. 7. Cool fluid or increase suction head. 8. Reduce viscosity of fluid; change ball material; increase ball size. |
| Pump delivers too much capacity. | <ol style="list-style-type: none"> 1. Insufficient discharge pressure. 2. Too much suction pressure. | <p>Increase discharge pressure (pump discharge pressure must be 25-30 psig greater than suction pressure to assure proper ball check valve operation).</p> |
| Noisy operation. | <p>Ball check valves.</p> <ol style="list-style-type: none"> 1. Excessive gear wear. 2. Improper lubrication. 3. Worn bearings. | <p>Ball valves makes a clicking sound as they operate - rattling noises may also be heard. Under certain conditions these noises are amplified by the natural resonance of piping. These noises are normal and should not cause concern.</p> <ol style="list-style-type: none"> 1. Replace gear set. 2. Replace with correct oil. 3. Replace bearings. |
| Motor overheats. | <ol style="list-style-type: none"> 1. Motor overloaded - pump operating in excess of discharge pressure rating. 2. Improper wiring or low voltage. 3. Hydraulic oil too viscous. 4. High ambient temperature. | <ol style="list-style-type: none"> 1. Limit discharge pressure to the maximum pressure specified. 2. Check power supply. 3. Drain/refill with correct oil. 4. Increase ventilation or relocate pump. |
| Pump leaking oil. | <ol style="list-style-type: none"> 1. Oil drain plug loose. 2. Pump overfilled with hydraulic oil. 3. Diaphragm head bolts loose. | <ol style="list-style-type: none"> 1. Tighten. 2. Drain oil to proper level. 3. Tighten to specifications. |
| Pump losing oil. Hydraulic oil discolored. | Ruptured diaphragm. | <p>Replace diaphragm after correcting cause of failure. Hydraulic oil must be discarded and the pump gearbox thoroughly flushed of all traces of process fluid. Replace with fresh hydraulic oil.</p> |

***IMPORTANT NOTE: The single most important cause of hydraulic diaphragm pumps not performing or under-performing is the entrapment of air, either on the hydraulic oil side or process liquid side or both. Please make sure that the last tiny bubbles of air are purged from both sides. THIS PROBLEM IS ESPECIALLY CRITICAL IN SMALL FLOW PUMPS.**

| | PROBABLE CAUSE | REMEDIES |
|---|--|---|
| Most problems that arise during or shortly after startup are a result of improper pump installation. Each AquFlow pump is tested and in good working order when shipped. Before making adjustments to, or disassembling any part of the pump, check the following. | <ol style="list-style-type: none"> 1. Insufficient hydraulic oil. 2. Clogged or blocked ball check valves, or check valves held open by solids. 3. Clogged/blocked suction strainer. 4. System discharge pressure greater than pump relief valve setting. 5. Starved suction. | <ol style="list-style-type: none"> 1. Fill to proper level. 2. Clean or replace (suction line not flushed prior to connecting pump, permitting debris to enter and block ball check valves. 3. Clean or replace. 4. Reset internal relief valve within pump rating. 5. Insufficient NPSH_a. Shorten suction piping; increase suction pipe size; increase suction head. |
| Pump motor fails to start. | <ol style="list-style-type: none"> 1. Blown fuse or tripped breaker. 2. Open thermal overload. 3. Low line voltage. 4. Open circuit in limit switches, timers or other control devices in pump motor starter circuit. 5. Motor damage. | <ol style="list-style-type: none"> 1. Replace fuse after correcting cause of overload. 2. Reset after correcting cause of overload; check heater size. 3. Determine cause and correct. 4. Reset. 5. Check motor for physical damage that may hinder operation. |
| Pump runs but fails to deliver. | <p>*Please read IMPORTANT NOTE first before proceeding.</p> <ol style="list-style-type: none"> 1. Insufficient hydraulic oil. 2. Check valve(s) lodged open by solids. 3. Worn or dirty ball check valves. 4. Suction or discharge line blocked. 5. Isolation valve closed. 6. Pump is not primed. 7. Check valves installed incorrectly. 8. Solids build-up between diaphragm and contour plate, limiting diaphragm movement. | <ol style="list-style-type: none"> 1. Fill to proper level. 2. Clean or replace. 3. Clean or replace. 4. Clean line. 5. Open valve. 6. Allow suction line and pump head to fill with liquid before pumping against pressure. 7. Remove and reinstall correctly. Remove and clean liquid end. 8. replace diaphragm. An infrequent occurrence when pumping fluid that contains particles that settle out. (A tubular diaphragm liquid end recommended.) |